LOADMASTER.... Your Waste Equipment Partner



ELITE SERIES

Parts & Spares Manual



APRIL 2019







APRIL 2019

ELITE SERIES.... PARTS CATALOG'S CONTENTS

NOMENCLATURELOADMASTER's "lingo"		pg aa & bb
SEC01	BODY Mounting Systems (to chassis frame rails) Ejector Blade	pg 01-01 pg 01-02
	Ejector's Telescopic Cylinder and Pinnings Ejector 's Tracking Shoes	pg 01-03 pg 01-04
	Body Side Access Door and Ladder Gate-to-Body Sealing System and Gate's Prop Rod	pg 01-05 pg 01-06
	Automatic Tailgate Locks ("Standard" for the Elite) Rear Tires Shrouding/ Mudflaps	pg 01-07 pg 01-08
SEC02	TAILGATE Gate's raise/lower Cylinders- Pinnings & Plumbings Gate-side Riding Step & "Track Caps"	pg 02-01 pg 02-02
	Gate-side Controls Gate-side Controls- Elite 5-SPOOL (rare)	pg 02-03 pg 02-04
SEC03	HOPPER'S COMPACTION BLADES Slider Blade, Slider's Shoeings, and Axles Slider's Shoes and Axles (cont'd)	pg 03-01 pg 03-02
	Slider Blade; Silder Cylinders and Pinnings Sweep Blade; Sweep Cylinders and Pinnings	pg 03-03 pg 03-04
SEC04	DECALS & LABELS Decals by their "correct" locations Decals locations (cont'd)	pg 04-01 pg 04-02
	Decalsavailable as "Kits" on backing sheets Decals "Option Decals" & MISCLY other decals	pg 04-03 pg 04-04
SEC05	ELECTRICAL & LIGHTING SYSTEMS Street Lights and Signals/Markers, etc. Street Lights	pg 05-01 pg 05-02
	Vacant Vacant	pg 05-03 pg 05-04
	Electrical Harness Available "segments" Electrical Harness segments (cont'd)	pg 05-05 pg 05-06
×	Throttle Advance Limit Switch w/ (push/pull rods) "Gate Ajar" & Button Head Switches	pg 05-07 pg 05-08
	"IN-Cab" Electricals & Controls Componentry "IN-CAB" Electricals (cont'd)	pg 05-09 pg 05-10

SEC06	HYDRAULIC RESERVOIR	
	"In-Body" Oil Tank (w/ INTERNORMAN Filtration) Oil Tank Weld Assy (and serviceable items)	pg 06-01 pg 06-02

pg 06-03 pg 06-04 Internorman Tank Top Return Filter- Serviceable Internorman Tank Top Return Element


SEC07 HYDRAULIC COMPONENTS and "PLUMBING"


PlumbingsTubes & Hoses at Body Face and Roof	pg 07-01
PlumbingsTubes & Hoses at Body Face and Roof	pg 07-02
"Body-Mounted Valve's Plumbing's"	pg 07-03
"Body-Mounted Valve's" Plumbings	pg 07-04
Plumbings Slide & Sweep Blades	pg 07-05
Plumbings Slide & Sweep Blades	pg 07-06

SEC08 HYDRAULIC COMPONENTS SERVICEABLE PARTS

	Body-Mounted Valve (akaBMV)serviceable parts Body-Mounted Valveserviceable parts	pg 08-01 pg 08-02
	Tailgate-Mounted Valve"Universal" Knock-Out Work Section Tailgate-Mounted ValveSpool Seals	pg 08-03 pg 08-04
	V20 Knock Out Work Section -Serviceable parts V20 Knock Out Work Section (cont'd)	pg 08-05 pg 08-06
SEC09	POPULAR OPTIONS	
	Roof-Mounted Cable Reever (AKA'2-10" Option) "2-10" Cable Reever (cont'd)	pg 09-01 pg 09-02
	Roll Bar-Clear Step Option (on Elite) Roll Bar- Clear Step (on the Elite)	pg 09-03 pg 09-04
	Can Coupler (AKA Can Latches / Elite Styles) Can Latches (cont'd)	pg 09-05 pg 09-06
	Spooling/Drum Winch (8K for the ELITE) Spool Winch (Cont'd)	pg 09-07 pg 09-08
	Remote Grease Point Options Remote Grease Point Options	pg 09-09 pg 09-10
SEC10	SCHEMATICS/ OTHER USEFUL INFORMATION	
	Electrical SchematicOverall Generic (Left "Halve") Electrical SchematicOverall Generic (Right "Halve")	pg 10-01 pg 10-02
	ELITE'S Correct Factory Pressure Settings Tools for "Checking/Adjusting" Hydraulic pressures	pg 10-03 pg 10-04
	Hydraulic Schematic - Elite Hydraulic Schematic - Elite	pg 10-05 pg 10-06
SEC 11	USEFUL CHARTS & PROCEDURES	
	Cable Anchoring (the Only Correct method)	ng 11 01

Cable Anchoring (the Only Correct method) pg 11-01 Port Devices Chart pg 11-02

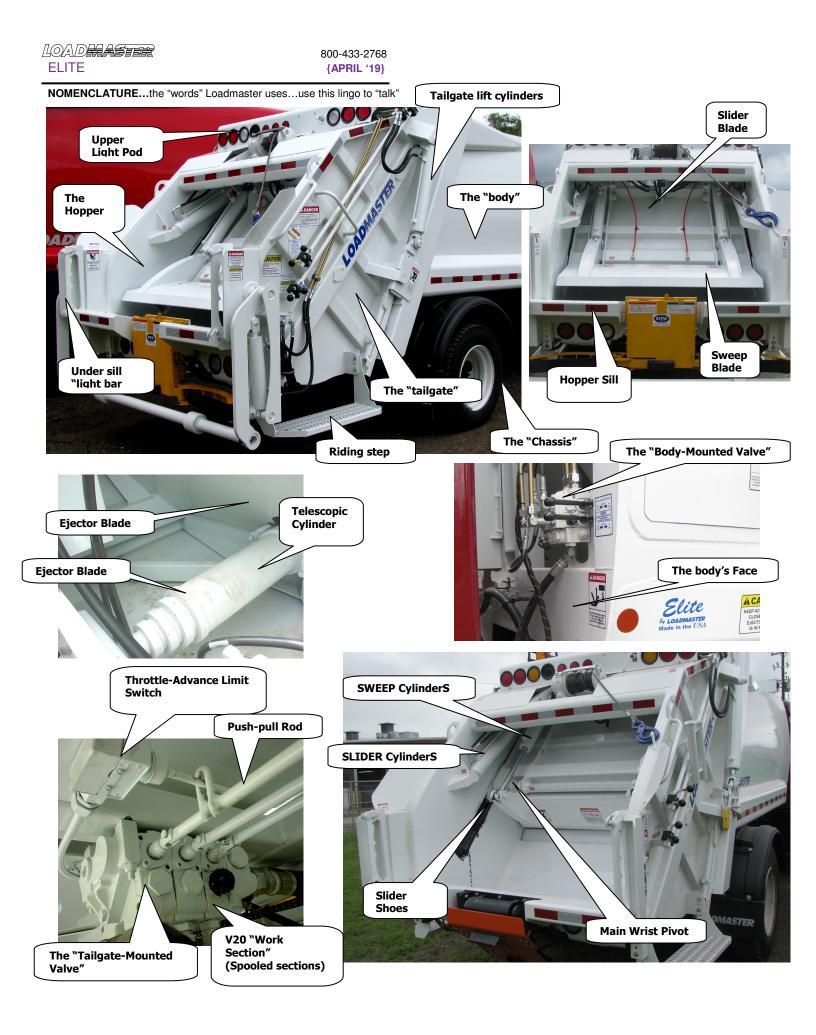

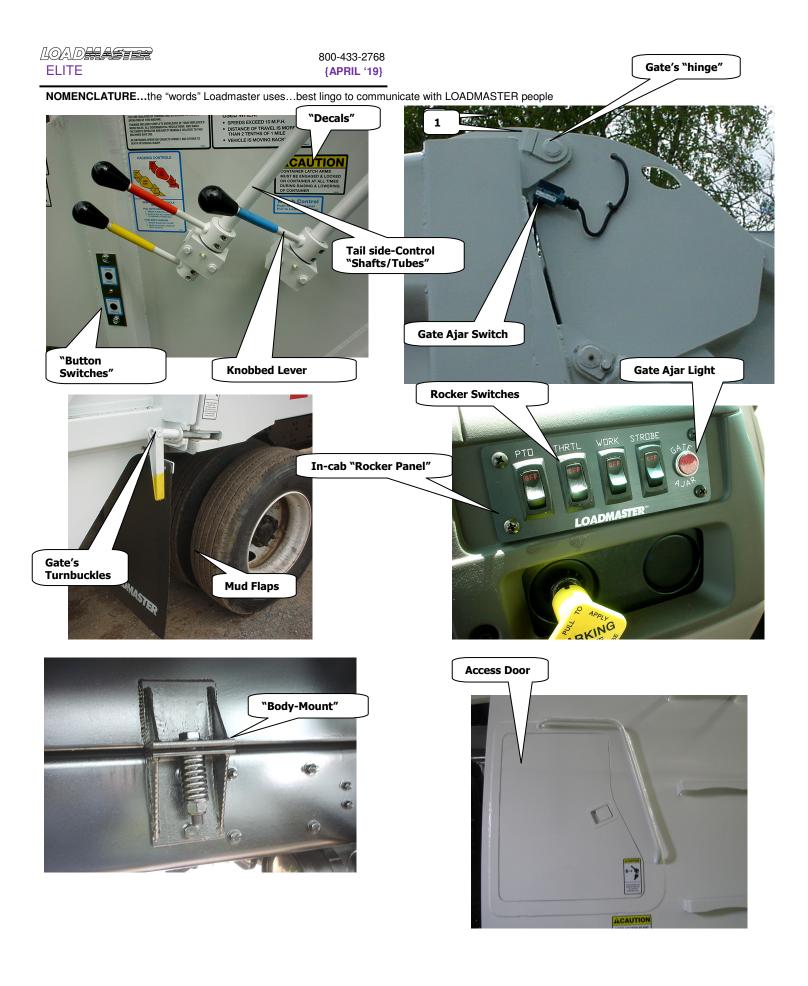

800-433-2768

0021427


0030898


В	OD.	Y MOUNTS (to the chassis)	
NO	Q	DESCRIPTION	PART NO
1	2	Rearmost Body Mount Plate	0030278
2	2	Forward Body Mount Weld Assy- UPPER weld-on	0103038
3	-	6" wide style (one spring "std" style) Forward Body Mount Weld Assy- LOWER bolt-on 6" wide style (one spring "std" style)	0103032
4	-	Forward Body Mount Weld Assy- UPPER weld-on 3 ³ / ₄ " special NARROW width style (one spring)	0103107
5	-	Forward Body Mount Weld Assy- LOWER bolt-on 3 ³ / ₄ " special NARROW width style (one spring)	0103108
6 7		Capscrew- 1" UNC x 7" lg (gr 5) Lock Nut_1" UNC	9950581 9950034
8	-	Flatwasher- 1" SAE	9950034 9950110
9 10		Compression Spring Capscrew- 1" UNC x 3 1/2" lg GRADE 8	9960044 9950850
11 12		 ³/₄" UNC x 2" Ig Flange head Frame Bolt (Gr 8) ³/₄" UNC Flange head Hex Nut (Grade 8 frame) 	9950802 9950050
13		Mid Guide Channel (slipper guide) NOT used for 6 yard Elite (needed for 8,10,11)	0070099
		Shimmer (for Mid Slipper Guide) 1/8" thk	0031617
		Shimmer (for Mid Slipper Guide) ¹ /4" thk	0030819
16	a/r	Shimmer (for Rearmost body mount) 1/8" thk	0040525

17 a/r Shimmer (for Front Lower mount) 1/8" thk

18 a/r Shimmer (for Front Lower mount) 1/4" thk



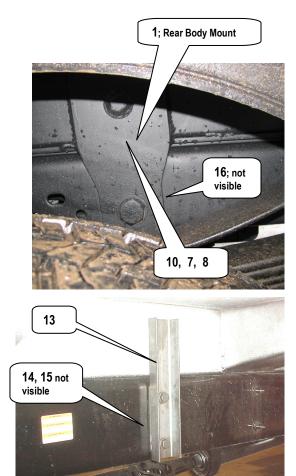

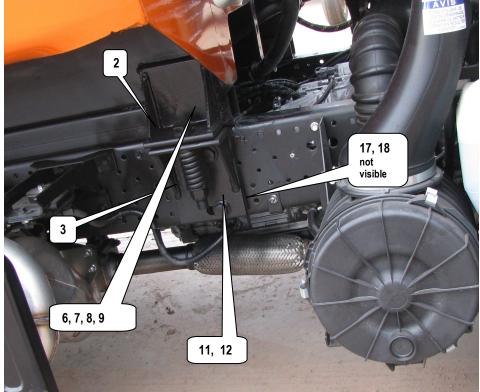

LOADHASTER	i i i i i i i i i i i i i i i i i i i	800-433-2768
SEC 01 PG 02	ELITE	[APRIL '19]

EJECTOR BLADE

NOQDESCRIPTION11Ejector Blade Weld Assy- 6YD/8YD/10YD21Ejector Blade Weld Assy- 11yd

- 3 -4 - -
- 5 -6 - -
- 0
- - -
- - -






1 or 2

PART NO

0100143 0100491

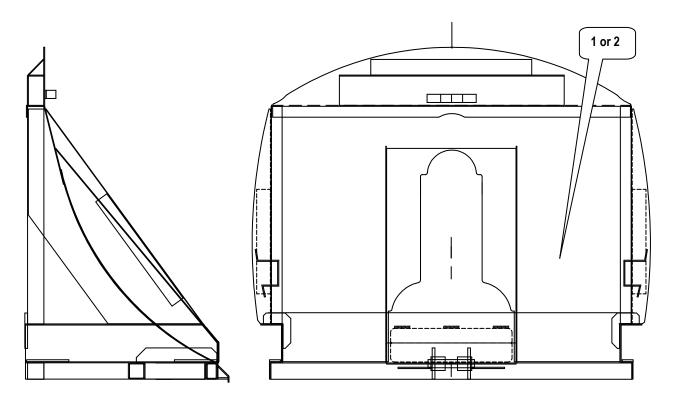


LOADHASTER SEC 01-- PG 03 ELITE


- -

800-433-2768 [APRIL '19]

EJECTOR'S TELESCOPIC CYLINDER and PINNINGS

DESCRIPTION PART NO NO Q Ejector "Rod-type" Cylinder- ELITE 6 yard only
 Seal Kit (for cylinder 9937054) 9937064 1 8800664 2 Ejector Telescopic Cylinder- **E8, E10, E11** Seal Kit (*for telly cyl 9937061*) contact factory 9937061 3 1 4 call - Pin Sub Weld Assy (body-side/ telescopic)
 Pin Sub Weld Assy (ejector-side/ tele) 5 0102124 0102123 6 2 Ejector Stop (Weld-On) - **8 Yard Elite ONLY** Welds to top surface of body's ejector track channs 7 0031612 9 Q X 10 Q X

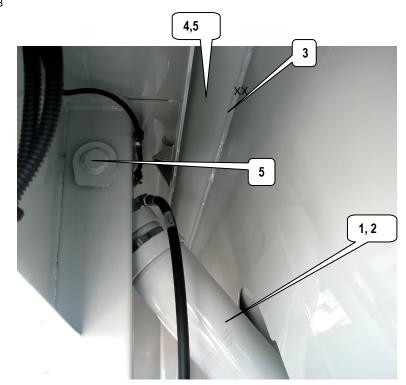


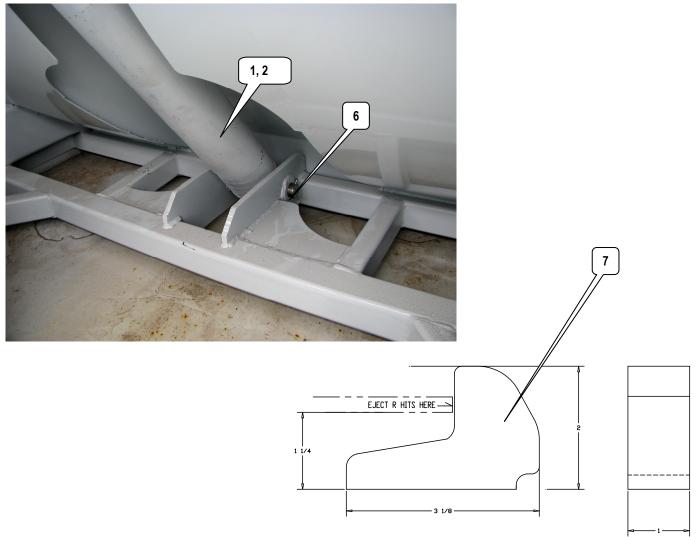



800-433-2768 [APRIL '19]


EJECTOR'S TRACKING POLYMER SHOES...etc

NO	Q	DESCRIPTION	PART N
1 2		Main HiLoad Polymer Shoe (Elite Ejector) Yaw (akaTailwag) Polymer Shoe	2600076 2600024
3 4		Countersunk Screw- ½-13 unc x 2 ¼" lg (w/ Flats) ½ UNC Hex Nut (use 242 Threadlocker)	2600123 9950148
5 6	-	Flatwasher- ½" SAE Shoe Retainer- 2- bolt Elite style	9950105 0031170
8	a/r	Shimmer- Yaw Guide (3/16" thk) Shimmer- Yaw Guide (1/4" thk) Shimmer- Yaw Guide (3/8" thk)	0021290 0031149 0031818
	a/r Q	Shimmer- Yaw Guide (1/8" thk) X	0021289
12	Q	х	

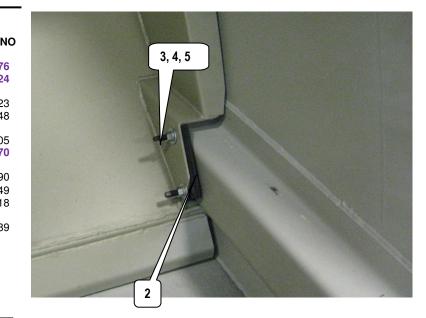

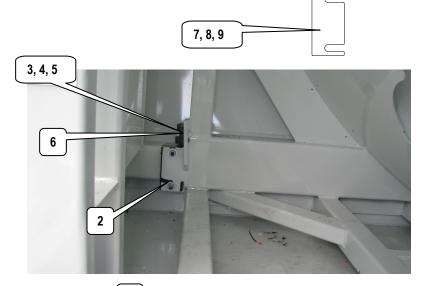

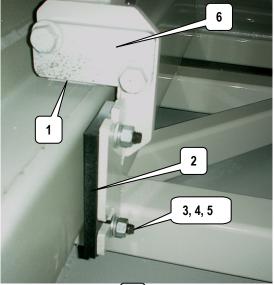

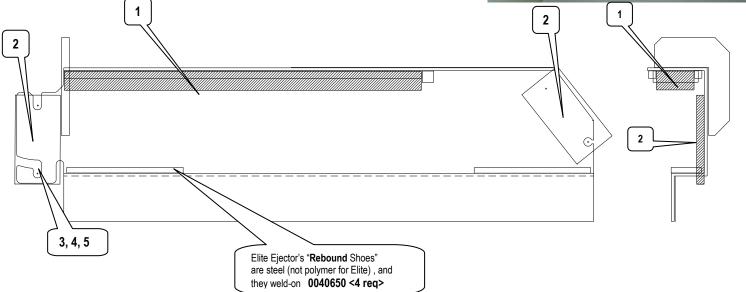


SEC 01-- PG 05 ELITE

800-433-2768 [APRIL '19]

BODY SIDE ACCESS DOOR & LADDER

NO	Q	DESCRIPTION	PART NO
1	1	Ladder Weld Assy (2-rung)	0120730
2	-	Ladder Weld Assy (1-rung for "low rails" chassis)	0120769
3	4	Hex Head CapScrew- ½" unc x ½" Ig	9950702
4		½" UNC Nylock Nut	9950029
5		½" Flat washer – SAE	9950105
6		Door & Door Jamb – 'Paddle-style <i>slam</i> latch"	0021252
7		Door & Door Jamb- " Bolt style latch "	0023440
8		Paddle Latch (Key'd w/ 2 keys)	9960189
9		"Bolt-style" Latch (aka External latch)	9960269
10		Catch (welds onfor "bolt style latch)	0040742
11		Bracer Rib (for "paddle style latch")	0030998
		Grab Handle – Elite style Key Lock Mount Bracket Lock & Keys	0050024 0021589 9960269
-			

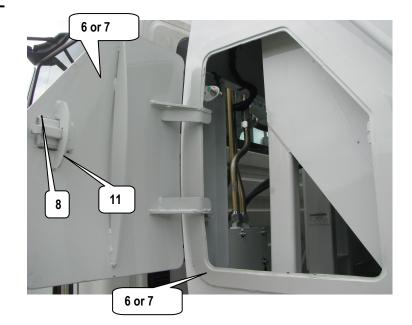










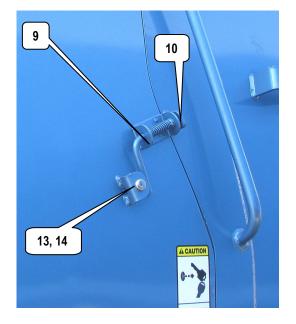



 LOAD
 SEC 01-- PG 06
 ELITE
 800-433-2768

 Image: Sec 01-- PG 06
 ELITE
 [APRIL '19]


GATE-TO-BODY SEALING & GATE's PROP ROD

NO	Q	DESCRIPTION	PART NO
1	1	Rubber "P-shape" Seal- 16 foot continuous	9960190
2	2	Vertical "Pound Over" seal clamp (24")	0021324
3	1	Horizontal "Pounder Over" seal clamp (71 ½") Items 2 & 3 are welded to gate Shell	0021323
4	2	Gap Fill Steel Bar (1/4 x ³ / ₄ hr bar x 36" lg) Just ABOVE the vertical rubber seal	0040748
5	-	-	
6	-	-	
7	1	Prop Rod Weld Assy- RH	0101351
8	1	Prop Rod Weld Assy- LH	0101352
9	2	Holder/ Storeage Bracket (for prop rod)	0030620
10 11	2 -	Thumbscrew- 3/8 UNC x 1" lg	9950261

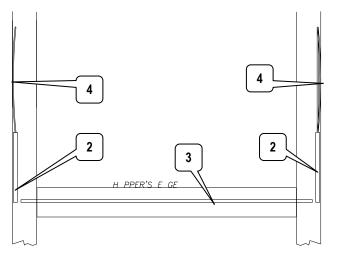

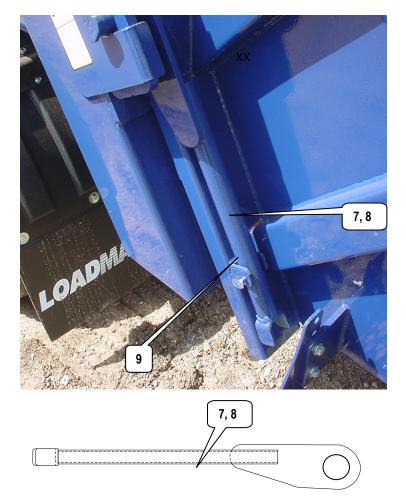


DANGER!! Never "work under" or "cross under" a Raised Tailgate ...unless it is <u>"3-WAY SUPPORTED"</u>! Read / STUDY your OPERATOR'S & MAINTENANCE MANUALS for SAFE methods of <u>"supporting"</u> a Raised Tailgate.

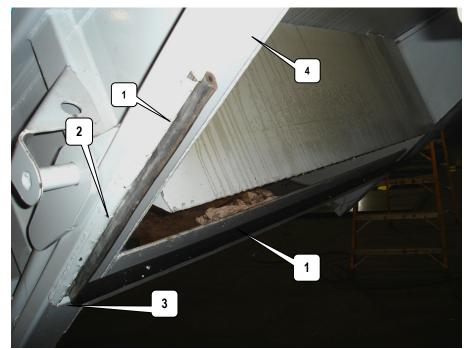



AUTOMATIC TAILGATE LOCKS (STANDARD on the ELITE)


NO	Q	DESCRIPTION	PART NO
1 2	1 1	Lock Bar Weld Assy- LH Elite Lock Bar Weld Assy- RH Elite	0100179 0100180
3	2	Pin Weld Assy- Body-side pinner Cylinder's Rod Side clevis	0102125
4	a/r	Flat Washer- 1 1/2" SAE	995xxxx
5	1	Lock Box Weld Assy- LH	0100175
6	1	Lock Box Weld Assy- RH SubWeldwelds to body	0100176
7	2	Gate Lift Hydrau Cylinders (Elite)	9937063
8		Gate Cyl Pinner (upper, cyl's Base End)	0080201
9	2	Hose Assy- 1/2 x 38" Lg. (gate up)	9934142
10 11 12	Q	Hose Assy- ½ x 40" lg (gate dwn) X X	9934143

- 13 14 15 Lanynard'd Back-Up Detent Ball pin KIT 0120723 (NOT standard...Orderable as a FIX. Only IF a unit tends to want to drift/ unlock On-The-Route. Should NOT normally need this KIT...but <u>if</u> this KIT <u>is installed</u>, then assure the Warning Decal .in this kit.. is affixed to Body Face also)

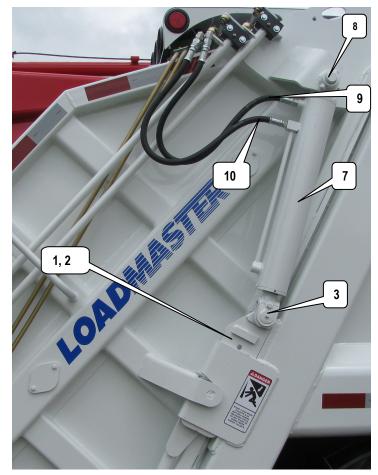


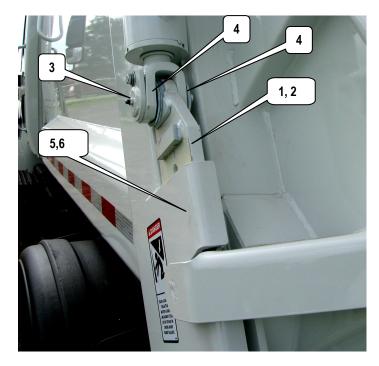

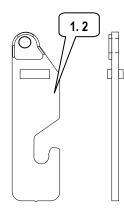

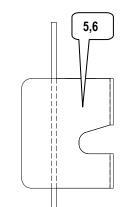


15; "BACK-UP / ANTI-DRIFT OPEN LAYNARD PINS "KIT" ... USE "BACK UP" PINS ONLY IF RARE NEED (not STANDARD)

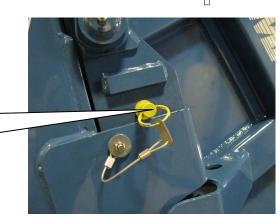

SEC 01-- PG 08 ELITE


REAR TIRE "SHROUDING" & MUDFLAPS

N	0	Q	DESCRIPTION	PART NO	
	1 2		Forward Shroud Bracket (<i>welds to body floor</i>) Rearward Shroud Bracket Brackets "work" for either 19.5 or 22.5	0031824 0031825	
	3 4		Tire Shroud – a pairfor 19.5 tire size (common) Tire Shroud- a pairfor 22.5 tire (uncommon for Elite)	9960159 9960157	
	5 6	2 2	Flat Mud Flap- logo'd (trimmed to 14" tall for Elite) Retainer Strip (for flat flap: steel 4-bolt)	2600080 0040075	
	7 8	24 -	Fender Washer- 3/8 x 1 ½ od -	9950880	
	9 10	-	-		

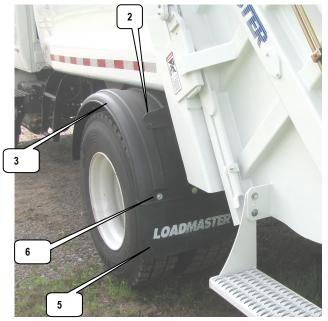





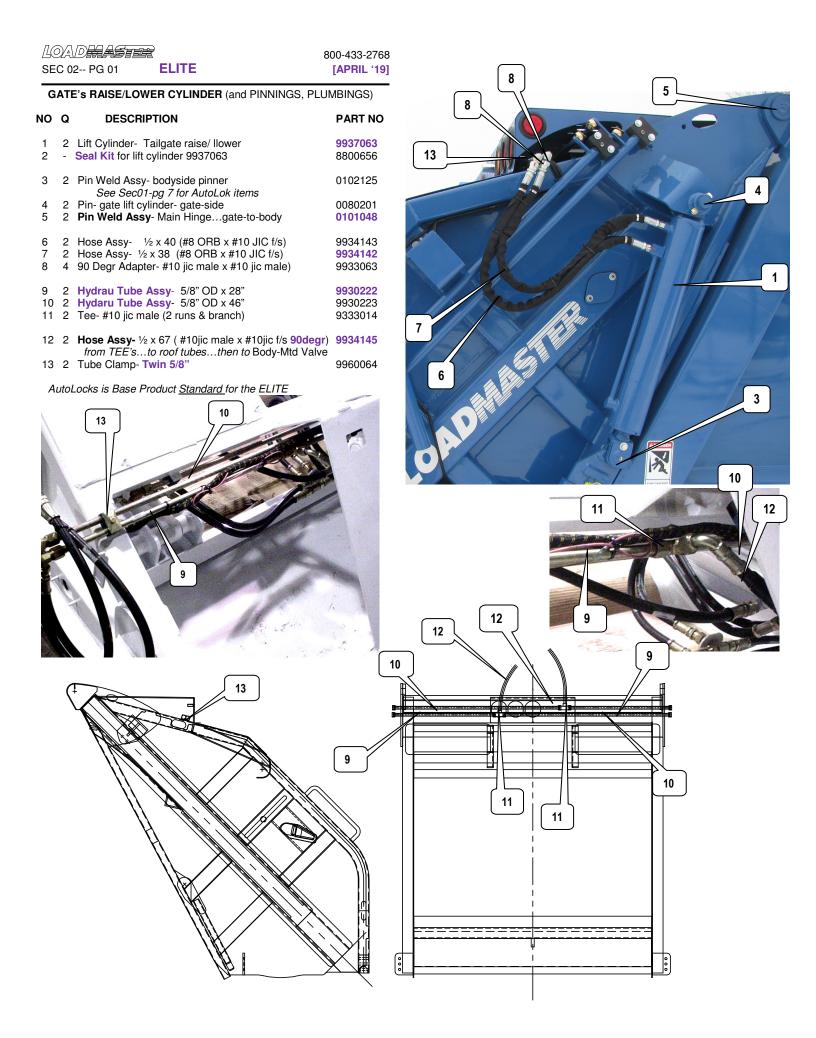


LOADHASTER SEC 02-- PG 02

ELITE

800-433-2768 [APRIL '19]


GATE SIDE RIDING STEP & "TRACK CAPS"

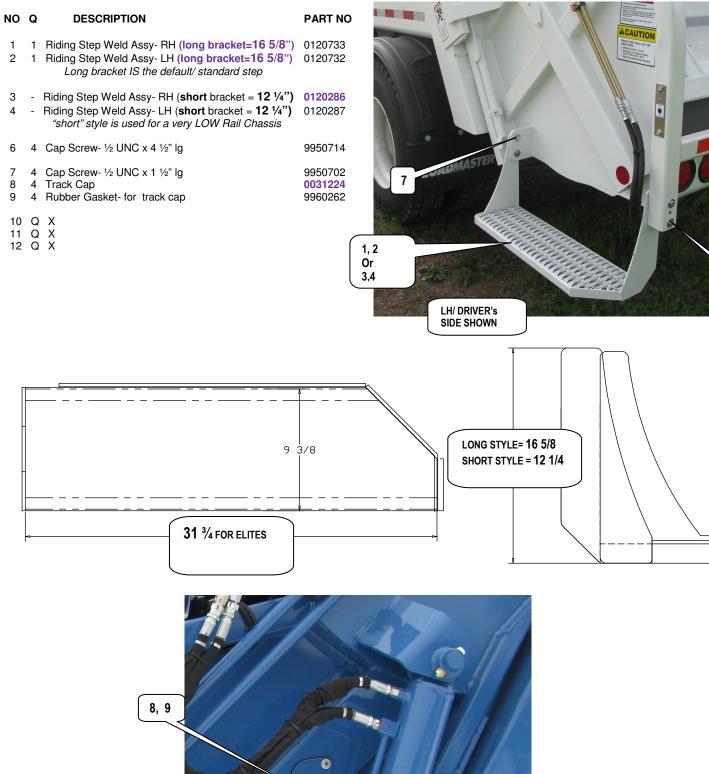

6

ELITE SEC 02-- PG 03

GATESIDE's CONTROLS

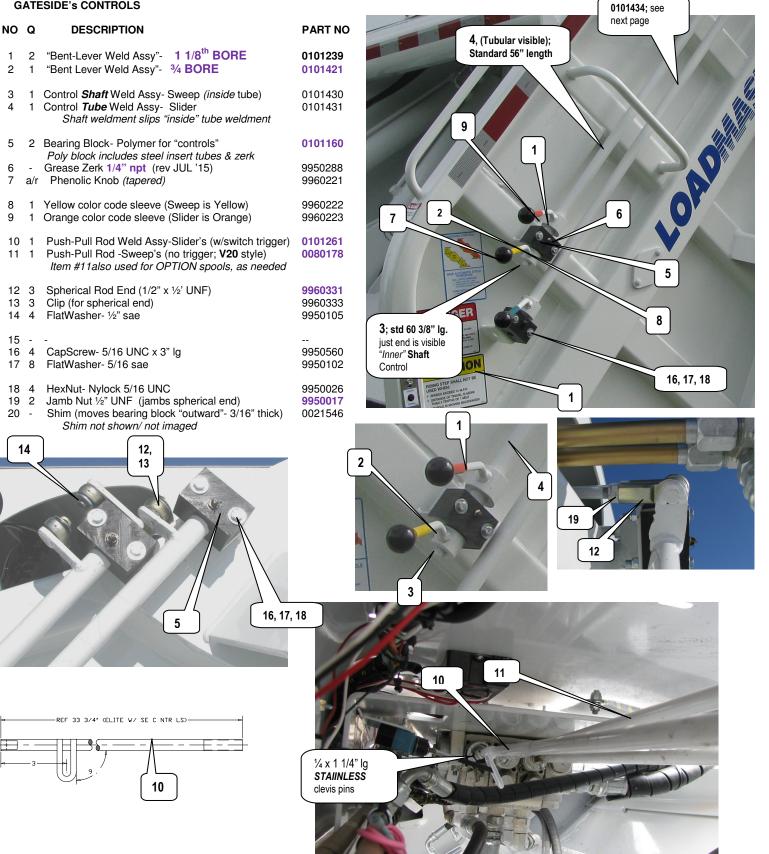

800-433-2768

[APRIL '19]

GATESIDE's CONTROLS- if up to a "5-SPOOL" ELITE (rare)

NO Q DESCRIPTION PART NO

ZX1 1 Control Shaft Weld Assy- Sweep 60 3/8" long...Not visible in image; inside item #2 2 1 Control Tube Weld Assy-Slider 0101431 56" long "STD/ common" tubular

Control items #1 and #2 are MATES to each other and are always the #1 and #2 spools for any and all Elites


- 1 Cntrl Tube W/A- "1st OPTION" (on a Elite) 0101434 3
- 68 ½" long tubular (if needed . .is the 3rd SPOOL)
 1 Cntrl Shaft W/A- "2nd OPTION" (on a Elite) 0101433 4 73" long shaft style; not visible...is INSIDE item #3 (if needed... is the 4th SPOOL)


Controls items #3 & #4 are MATES to each other...used IF NEEDED

5 1 Cntrl Tube W/A- 3rd OPTION" (or a CT...on Elite) 0101432 79" long tubular; could be the 3td OPT in a group of "5-SPOOL count"....or this tubular control could be "just", stand-alone control, for a Cart Tipper (CT)


A "OPTION" is typically such things as a Roll Bar, and/or a 8K Drum winch, and/or a Cart Tipper (CT), etc etc

Note...the Valve Mount (a part of the GateShell weld assy) and the Light Pod Weld Assy are "standard/ everyday" Elite items <u>UP TO and including the 4^{TH} spool.</u> However, if the Elite needs/ has to have a 5th spool (meaning 3 OPTIONS needed), then the Valve Mount becomes a <u>SPECIAL valve mount 0032057</u> <1 req> and the Light Pod Weld Assy becomes SPECIAL 0101429 < 1req> (to create the extra SPACE needed to "FIT" the 5 th spool need)

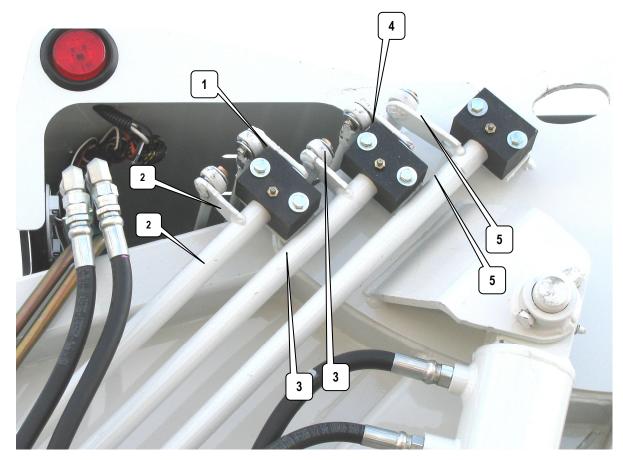

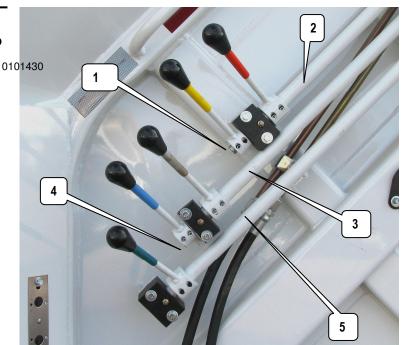



SLIDER BLADE SHOEINGS & SHOE AXLES

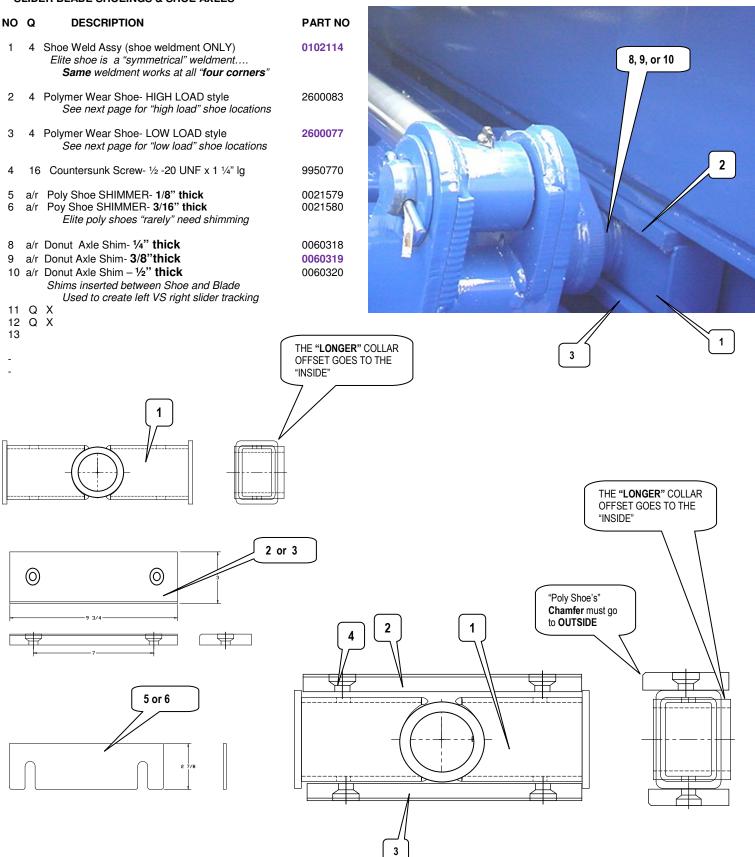

800-433-2768

[APRIL '19]

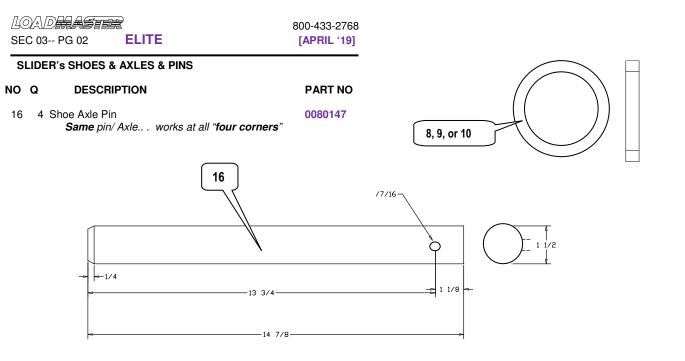

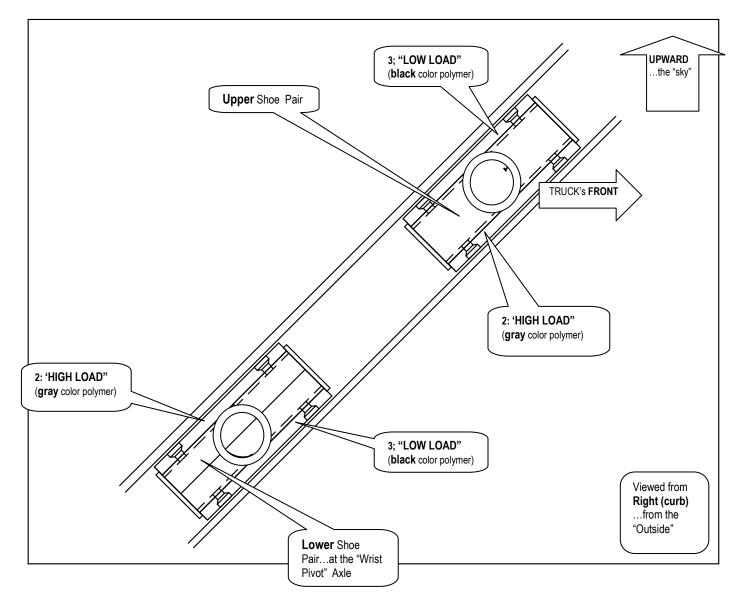

LOADHASTER SEC 03-- PG 03


ELITE


SLIDER BLADE, SLIDER CYLINDERS & PINNINGS

NO Q DESCRIPTION

1 2 3	 Slider Blade Weld Assy Slider Cylinder Seal Kit (for Slider Cylinder 9937062) For the Elite the Slider Cylinder and the Sweep Cylinder are SAME cylinder 	(9 8
4 5 6	 Pin- Slide Cyl. Rod-Side & Sweep Base-Side Pin Weld Assy - Slider Cyl Base-Side - 	(
7		



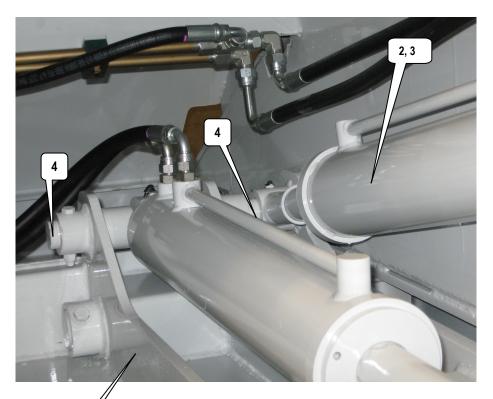

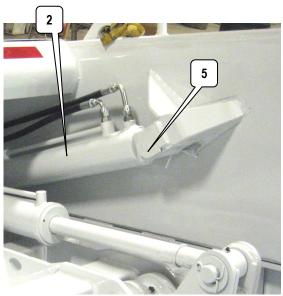


 LOADERASTER
 800-433-2768


 SEC 03-- PG 04
 ELITE

 [APRIL '19]

SWEEP BLADE, SWEEP CYLINDERS & PINNINGS


NO	Q	DESCRIPTION	PART NO
1	1	Sweep Blade Weld Assy	0102115
2	2	Sweep Cylinder For the ELITE"same" CYL for both slider and sweep	9937062
3	-	Seal Kit (for Sweep Cylinder 9937062) For the Elite the Slider Cylinder and the Sweep Cylinder are SAME cylinder	8800656
4	2	Pin- Slide Cyl. Rod-Side & Sweep Base-Side	0080148
5	2	Pin Weld Assy- Sweep's Rod-Side	0102122
6	2	Flatwasher- 1 1/2" SAE	XXXXXXX
8	2	Cotter Pin- 1/4 x 3	9950211

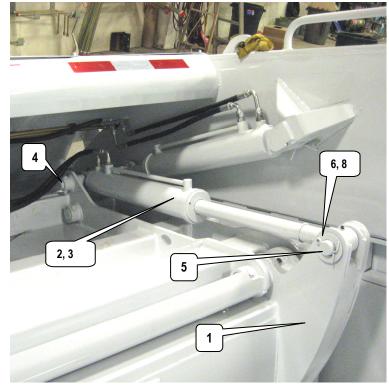

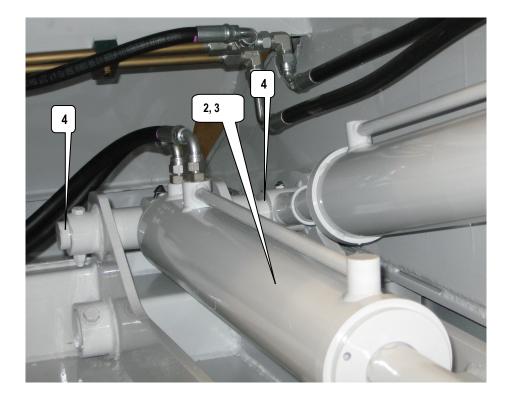

SEC 04-- PG 01 ELITE

INDIVIDUAL DECALS BY "LOCATIONS"

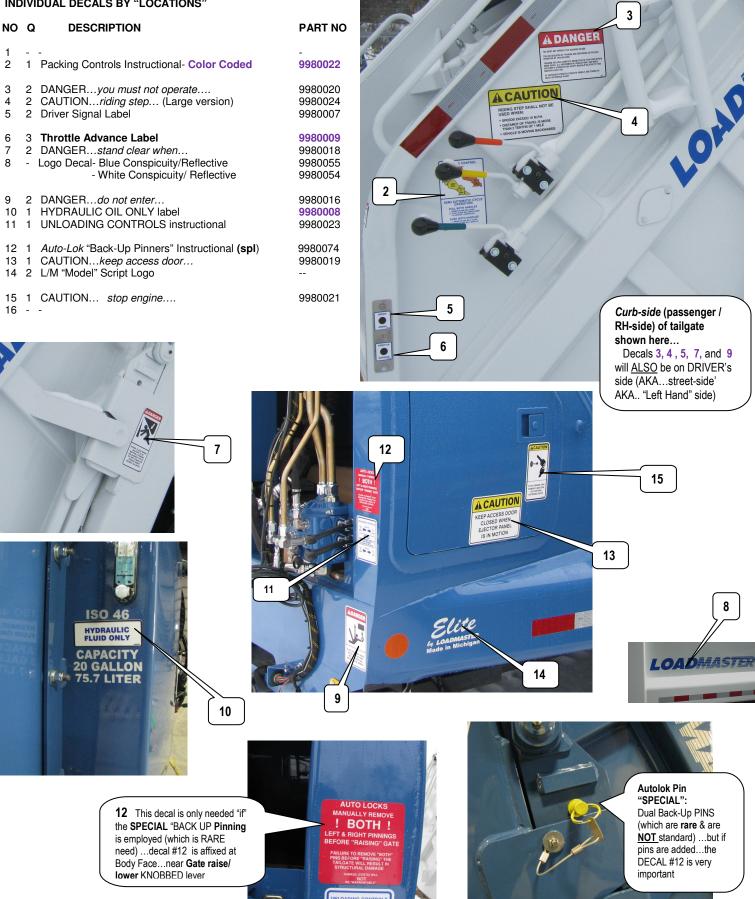

800-433-2768

[APRIL '19]

SEC 04-- PG 02 ELITE


800-433-2768 [APRIL '19]


1


INDIVIDUAL DECALS BY "LOCATIONS" (CONT'D)


NO	Q	DESCRIPTION	PART NO
1	1	NOTICE Dual Tone Alarms	9980108
2	1	WARNINGthis vehicle requires	9980011
3	1	DANGERYou must not operate(small version)	9980000
4		CAUTION <i>riding step</i> (in-cab "small" style)	9980001
5		DANGER you must not operate	9980020
6		CAUTION <i>riding step shall</i>	9980024
7	2	DRIVER SIGNAL Label	9980007
8	2	DANGER <i>do not ride on back</i>	9980025
9	1	DANGER <i>to prevent possible</i>	9980015
10	-	DANGER <i>stand clear</i>	9980017
11		Conspicuity Taping	9980058
12		Grease <i>Weekly</i> Decal	9980070
13 14		Hook Store Decal- LH Hook Store Decal- RH Store any & all cable hooks <u>ONLY</u> at the provided "B	9980102 9980103 ent Peg"



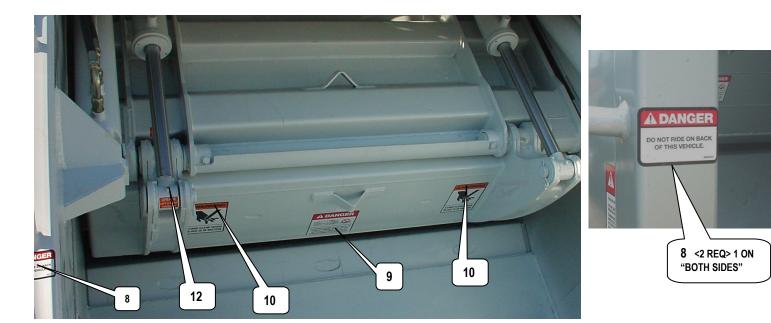

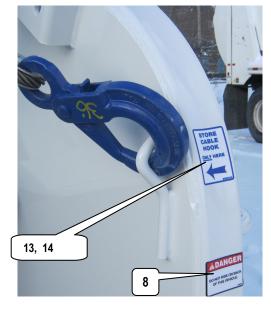

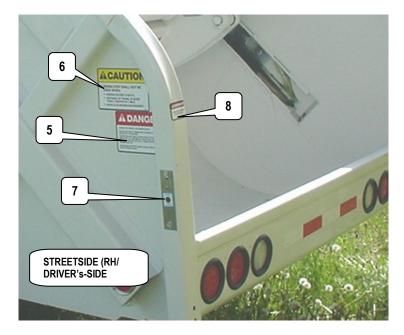

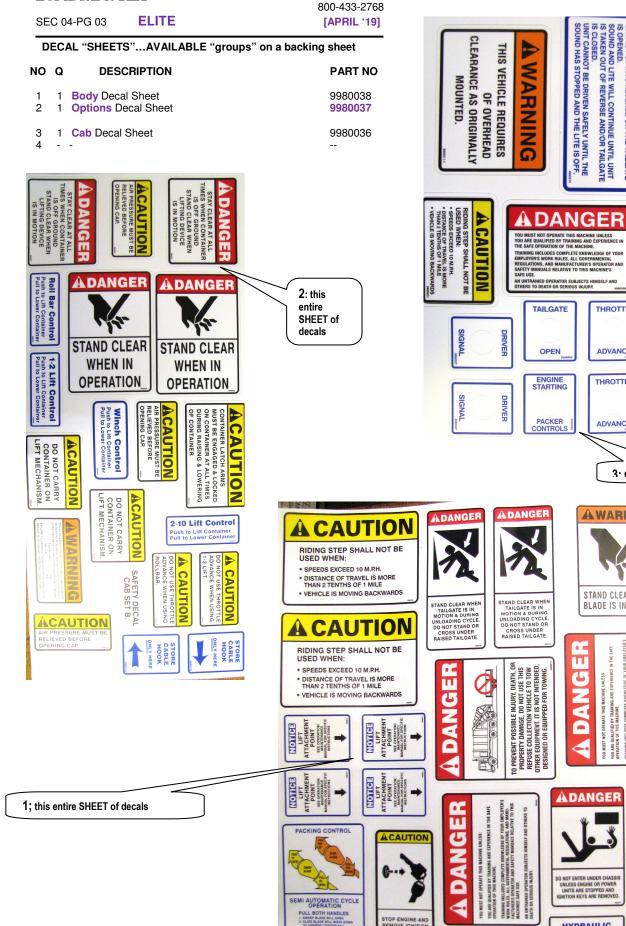

STOP ENGINE AND REMOVE IGNITION KEY BEFORE ENTERING BODY.

LES


THE BACKUP ALARM WILL SOUND AND TAILGATE OPEN LITE WILL LITE WHEN THIS UNIT IS PUT INTO REVERSE OR THE TAILGATE IS OPENED. 11 FT, 1 IN, 11 FT, 2 IN, 11 FT, 3 IN, 11 FT, 4 IN, 11 FT, 6 IN, 11 FT, 7 IN, . 11 IN 2 IN O IN 12 FT, 3 IN, 12 FT, 4 IN, 12 FT, 5 IN, 12 FT, 6 IN, 12 FT, 7 IN, 12 FT, 8 IN, 12 FT, 9 IN, SELECTOR SWITCH With automatic transmission control set at neutral and with: 1. Switch set in engine starting Switch set in engine starting position, engine can be started using ignition key in normal way.
 Switch set in packer control position, throttle will be advanced while operating packer body controls.
 Bear THROTTLE HOPPER THROTTLE e 0 N ON ADVANCE CONTROL LIGHT THROTTLE STROBE THROTTLE OF 0 N LIGHT ADVANCE ADVANCE 3. this entire SHEFT of decals AWARNING AWARNING STAND CLEAR WHEN STAND CLEAR WHEN **BLADE IS IN MOTION** BLADE IS IN MOTION KEEP ACCESS DOOR E CLOSED WHEN EJECTOR PANEL IS IN MOTION 0 Ē HING INCLUDES COMPLETE K RULES, ALL GOVERNMEN URER'S OPERATOR AND SAI HINES SAFE USE. 4 N UNTRAINED OPERATOR EATH OR SERIOUS INJURY U -DING CONTROL NOT RIDE ON BA NOTICE

10 FT. 8 IN. 10 FT. 8 IN. 10 FT. 9 IN. 10 FT. 9 IN. 10 FT. 10 IN. 10 FT. 0 IN.



HYDRAULIC

FLUID ONLY

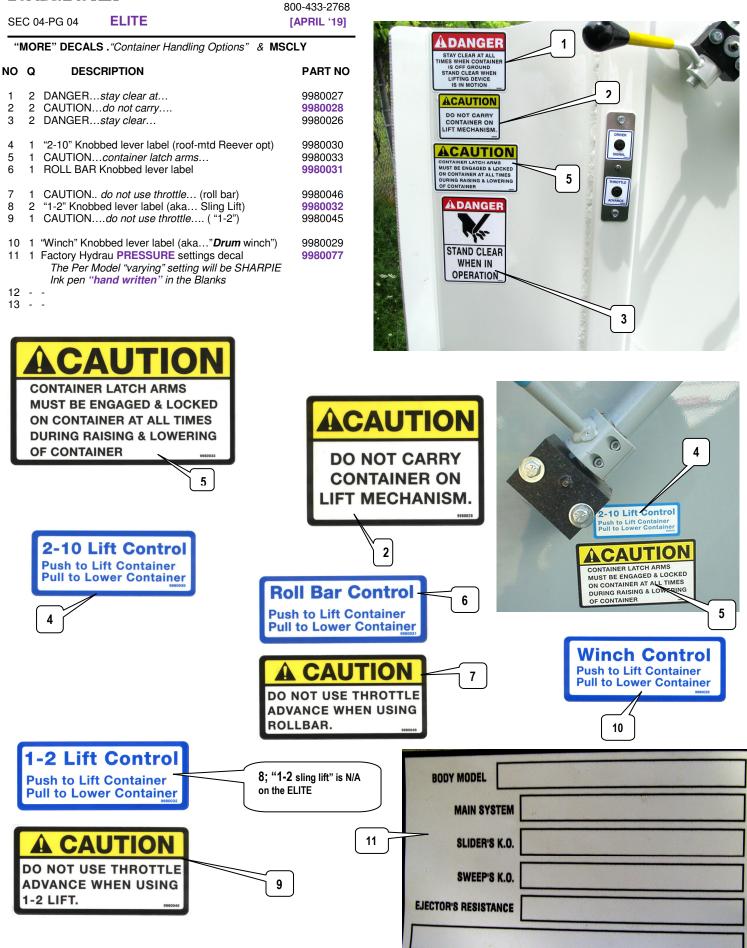

LOADHASTER 800-433-2768 ELITE SEC 05-- PG 01 [APRIL '19]

STREET LIGHTS & RELATED SHEET METALS

NO	Q	DESCRIPTION	PART NO
1 2	1 1	Upper Light Pod Weld Assy (weldment only) Dual Tone (distinct audibles) Alarm Grommet mounted "style" in upper light bar	0101349 9910499
3	8	4" SST LED Red Light	9910226
4	-	4" Grommet	9910216
5	5	2 ½" Red LED Marker Light	9910224
6	-	2 ½" GROMMET	9910217
7	-	Strobe Light ("Beacon Style) - Optional	9910044
8	-	(OPTION) Strobe Cage Weldment (Weldment only)	0120215
9	4	BackUp Light (clear/white LED)	9910277
10	1		0021310
11	2		9910225
12	a/r		9910483
13	2	"FIREBALL" Reflector- RED	9910299
14	2	"FIREBALL" Reflector- AMBER	9910300

5

LOADMAST

13

3

4

9

6

2

5

9

8

14 15



8 7




item #2 ... is now rectangular shaped "Dual Tone" Trucklite audibles..2 distinct Audilbles in ONE Housing (ANSI Wastec)

<u>L</u> @ SE		DHASTER 5 PG 02 ELITE	800-433-2768 [APRIL '19]
V	ACA	NT	
NO	Q	DESCRIPTION	PART NO
1 2		XX XX	XX
3 4	Q Q	XX X	
5 6	Q Q		
7 8	Q Q		
9 10	Q Q	X X	

LOAD ASTER SEC 05 PG 03 ELITE	800-433-2768 [APRIL '19]		4,5
VACANT NO Q DESCRIPTION	PART NO	7	3
1 Q XX 2 Q XX	xx		
3 Q XX 4 Q XX			
5 Q XX 6 Q XX			

<u>[[@</u> SE		D###STER 5 PG 04 ELITE	800-433-2768 [APRIL '19]
V	ACA	NT	
NO	Q	DESCRIPTION	PART NO
1 2		XX XX	XX
3 4	Q Q	xx x	
5 6	Q Q		
7 8	Q Q	x x	

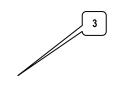





LOAD ASTER SEC 05-- PG 05 ELITE 800-433-2768 [April 2019]

ELECTRICAL HARNESS SEGMENTS

1- "Cab" Harness- 9910429 (Generic style)

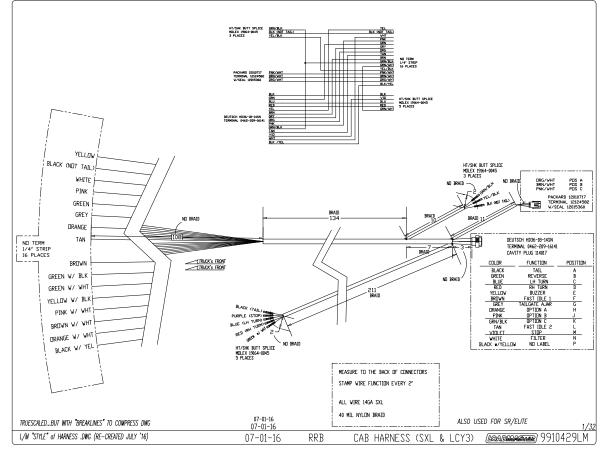


^{2- &}quot;Body" Harness- 9910259 (ELITE style)

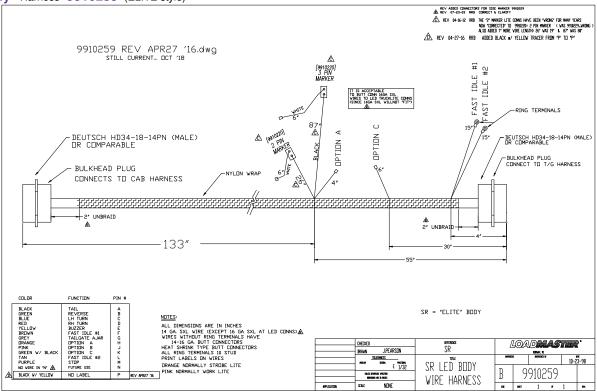


ELECTRICAL HARNESS SEGMENTS

3- "Tailgate" Harness- 9910258 (ELITE style)

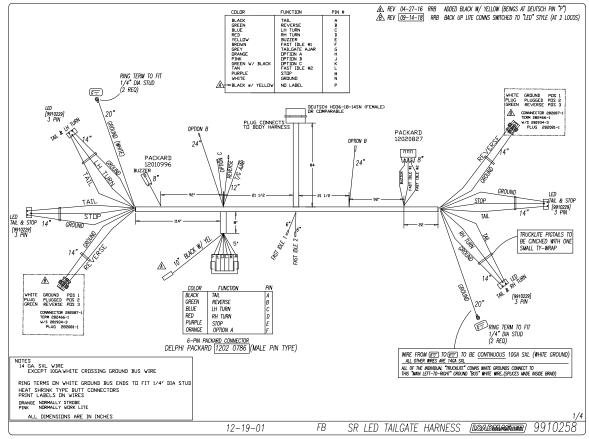

3- "UniPod" Harness- 9910238 (ELITE style)

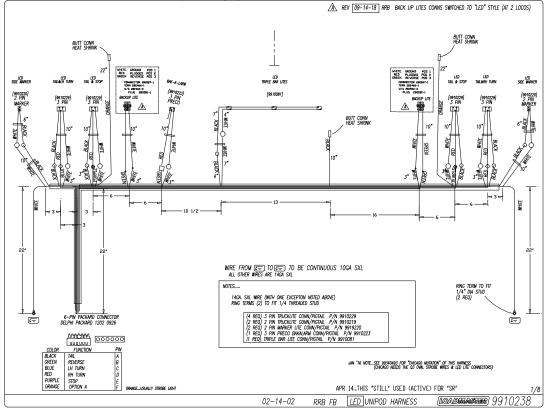

) C 05 PG 07	ELITE	800-433-2768 [APRIL '19]
т	HROTTLE ADVAN	NCE SWITCH	
NO	Q DESCR	IPTION	PART NO
1	Includes i Pre-Wired footage o	ADVANCE Switch Assembly mounting hardware w/ screw o-rings of N.O. for the Throttle-Advance with f jacketed cable and watertight connector at the switch body	0101193
2 <i>3</i>	 Limit Switch Cord-grip or 	only aly sealing connector (at switch's body	9910131) 9910130
5 6			
7			
			trigger loop" (welded to SLDER's Push-Pull rod) Gocalled"Tailgate- Nounted Valve"


Loadhaster


SEC 05-- PG 08 ELITE

GATE AJAR LIMIT SWITCH

NO	Q DESCRIPTION	PART NO
1	1 Pre- <i>Wired</i> GATE AJAR limit switch ASSEMBLY Includes the switch, the jacketed cable, the cord-grip and attachment fasteners (w/ fastnerr <u>O-rings</u>)pre-wired N.C. for the gate ajar function	0101192
2 <i>3</i>	 Limit Switch only <i>Cord-grip</i> only sealing connector (at switch's body) 	9910131 9910130
4	1 Momentary Button Head Switch Body Face's manual throttle-advance	9910345
5 6	 Stainless Steel Switch Panel- Dual Stainless Steel Switch Panel- Single Located in tailgatenear Knobbed Controls 	9910179 9910180
7	4 Self-Drilling/ tapping Screws (Stainless steel) 5/16-18 x 1/2" long FASTENAL 32415	

800-433-2768

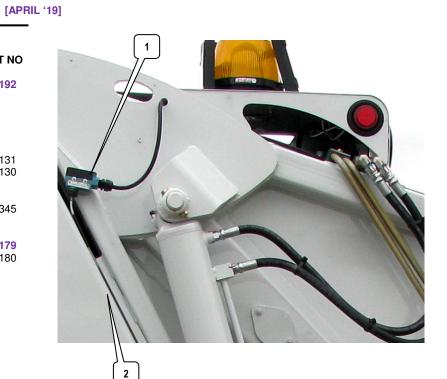

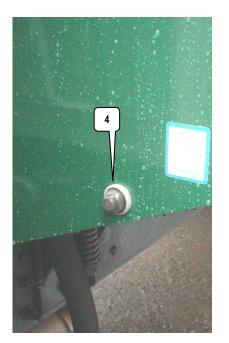





IN CAB ELECTICAL CONTROL PANELS

NO	Q	DESCRIPTION	PART NO
1	1	Rocker-Switch Deck (Obsolete at apr 2019) Complete 4-gang of Rockers w/ ajar light on its pa Red-band will "show" when rocker is in "ON" posit	
2	1	Two-Light Mini-Panel <pto &="" filterobso="" service=""> Complete 2-lite on its panel IMPORTANT: Keep the PTO light in good working</pto>	9910273
3	6	Trim Screw- Black anodized "Teks #8 x 1/2"	9950435
4	4	One Replacement Rocker Switch only (Obso) 2-position on/off almost always (snap-in)	8800506
5 II	1 MPC	One Gate Ajar Pilot light (w/ bulb) (obsolete) Snap-in the holestyle of housing DRTANT!!! Keep Gate Ajar light in good working co	9910197 ndition !!
be	ecar 1e F 2-L 2-L "PT Re Ye	y 2017LM's 4-gang Rocker Switch Paneland2 lit me back-lighted/ all LED "nicer" <i>Road Runner Corp's</i> st Road Runner Part Numbers: (early 2017 to current ocker Switch Deck (w/ Gate Ajar led light = 9910513 .ite MiniPanel (red PTO & yellow Filter lights)= 991051 .ite MiniPanel (but "blank" legends) = 9910515 "O" legend = 9910518 d LED Pilot Light = 9910519 llow LED Pilot Light= 9910520 cker Switch (Road Runner stylewith integral LED) = 9	yles here are / Apr '19) 4

1	Fuse Block (just the baseno fuses)	9910092
	Base here fuses ${m 8}$ separate circuits "Branches	**
6	Fuse	NAPA, etal
	All ATC 20 ampexcept PTO fuse is 7 1/2 am	ip !
1	Buzzer	9910077
	Old-fashion, common ColeHersee style of Drive	er Signal Buzzer
-	Relay Base (gray color: hard-wiring base)	9910185
	Typically is two reg'dbut can vary	
-	Relay	9910184
	Yellow, transparent ICECUBE relayplugs into) Base above

Relay Anchoring Kit 9910186 10 2 Includes 2 (per relay) stamped side clips & one wire holder 3" DIN Rail 9910187 11 1

12

5

6

7


8


9


<<IMPORTANT: Always "anchor" the Plug-In Relay with anchoring kit...relay will NOT stay affixed to Base if not ANCHORED. It will come Loose. >>

NOTE: the above LOADMASTER electrical "interface" the L/M Body To the particular Chassis....most of these stuffs tend to be located "Under Dash" on left side of Steering Wheel...BUT LOCATIONS WILL VARY WITH CHASSIS PARTICULARS...use these images to IDENTIFY the LOADMASTER Electrical stuffs when "troubleshooting" Electricals...If still can not "locate"...contact LOADMASTER 800-433-2768

Some Chassis do not need the above "interfacing" stuffs...most notably: The CCC LET's and "other" Chassis that have a Fender Mounted Body-Builder's Junction Box. Another "prime" example of the above stuffs not even existing on your unit...International's Factory 6-pack w/ Remote Power Module (aka=RPM) multi-plex "systems" do not require these stuffs.

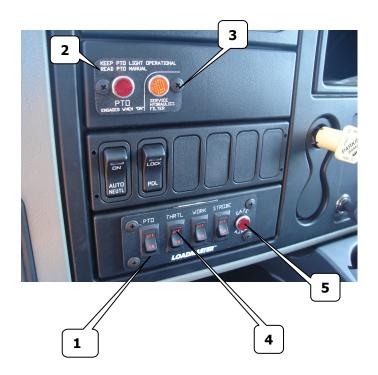

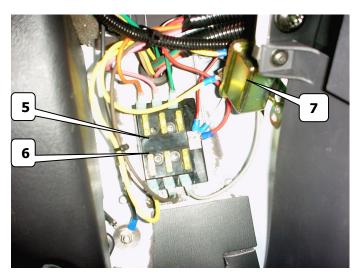

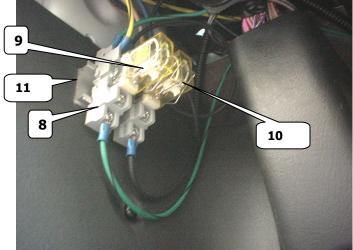

UNDER-COWLING "FIREWALL" ELECTRICALS (if needed)

NO Q DESCRIPTION


PART NO

800-433-2768


{**APRIL** '19}

- 1 1 Firewall Term Strip- 12 position (*Obsolete* style) 9910043 WAGO style 12-singles/ 3-doubles is **9910399** WAGO (pronounced Vago...german) IS current Production style
- 2 1 Relay- Back-Up Lights "Isolation" Relay 9910267 Used for "standard" Incandescent Back-Up lights << Isolates the Load from the Load-Finicky chassis brain>> Bosch "foot-mount" style


This relay IS NOT req'd if unit has LED Back-Up lights.

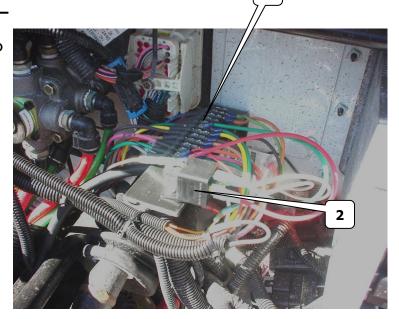

1

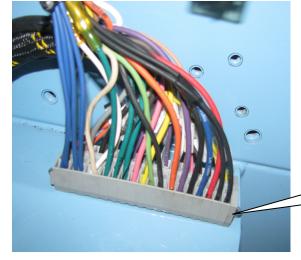

"WAGO" style TERM STRIP **9910399** ...is current/ active style. Blunt cut wires are inserted into spring-loaded Stainless Steel wire pockets. 3 doubles + 12 singles Capacity (*modular...*can be altered)

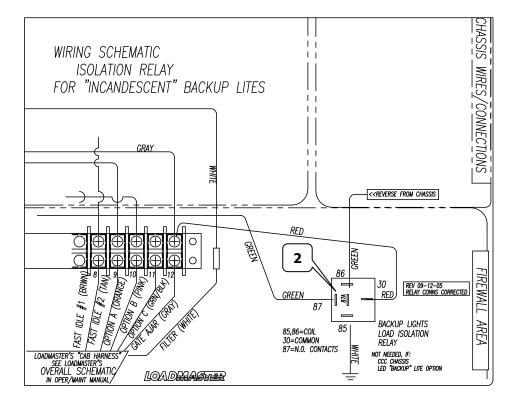


		D###STER 6 PG 01 ELITE	800-433-2768 [APRIL '19]
E	LIT	E "OIL TANK"	
NO	Q	DESCRIPTION	PART NO
1 2		Elite Oil Tank Weld Assy Filler/Breather/Strainer (fluted Chrome)	0100526 9931032
3 4	1 1	Entire Return Filter Assembly Oil Level Site Glass	9931107 9931118
5 6	1 1	Clean Out/ Inspect Cover (Tank Top) Gate Valve- 1 ½" NPT full port The ELITE usually employs a 1 ½" suction line	9931005 9932013 e setup
7	0		

7 Q X

See sec06 pgs 03 & 04 ... for the ELITE's Return Filter "serviceable items"



ELITE "OIL TANK" WELD ASSY

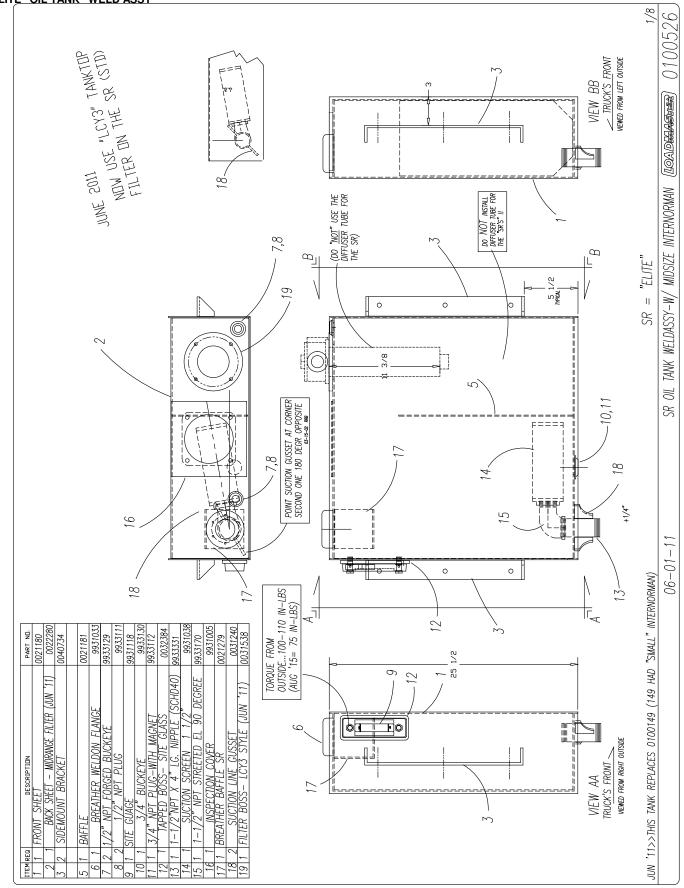

RETURN FILTER'S SERVICEABLE PARTS

NO	Q	DESCRIPTION	PART NO
1	1	Entire Filter Assy Includes all shown in image to right Includes Filter Monitor Guage, Clog Indicator Swi <does aluminum="" diffuse<="" include="" not="" swaged-on="" td=""><td>9931107 itch, Element er tube></td></does>	9931107 itch, Element er tube>
2	1	Diffuser Tube-Aluminum (not used for ELITE !!) "Swaged" onto filter's polymer "canister"	not used
3	1	Filter Element- Elite (which is "same as" Legacy) Your "key" service itemMaintain this for hydrau	8800684 lics "health"
4	1	Filter Condition Monitor (visual) Replace if damaged (important "Monitor")	8800696
5	1		9933411
6	1	Clog Indicator Elect Switch Wired to drive a Dash Panel Light	8800697
7	1	O-ring	8800804
8	1	Seals betwixt Canister's upper shoulder & cast H O-ring	lead 8800805
		Cap's seal & Betwixt Head and tank top boss	
9	1	O-ring Under red cap	8800914
T		ELITE p	r <u>NOT</u> used for the roduct (none used)
			3, the 0-ring is included with each Element and is at very Bottom of canister, between bottom of Element and Canister's inside bottom. Inspect old o-ring (with PenLite) and replace O-ring "if needed" at time of installing a fresh Element





8

SEC 06- PG04: SERVICING THE RETURN FILTER ELEMENT (ELITE)

The **Elite** "return filter" uses a premium quality Micro glass *element* of 10 Micron nominal. This element traps-out relatively small particulates and has a relatively high dirt holding *capacity*. Another "premium" feature of this INTERNORMAN (the "brand"... a German company) filter is that the Bypass valve is "integral" to the element itself. This means that each time you install a "fresh" element...you are simultaneously assuring a "fresh" filter *bypass valve*.

Read topic #1 in the manual's **P-M...HYDRAULIC SYSTEM** section for a "outline" of *when* you should service this return filter Element. The <u>Elite</u>, with the *Internorman*-brand of filter, uses Element p/n **8800684**.

1-Begin by cleaning/wiping away any Tank Top dirt that may have accumulated near the Tank Top Filter's plastic red cover (which has wrenching "square" for 1-1/4" wrench size).




2- Remove the Filter's Top Cover by turning CCW. The Cover's compression spring will be "pushing"...so use your hand over the Red removable polymer cover when it is close to being fully un-threaded to control.

3- Grab onto the wire 'bail" and slowly-lift out the entire assy. and keep centered to allow OIL to drain back into tank.



4- Now remove the "old" element. Put it into clean garbage bag so you can later "study" what has been trapped-out of the hydraulic system (can offer "clues" as to the hydraulic system's "health").

5- Insert fresh element into the Bowl...this element has a "built-in" Bypass Valve. Assure the Bypass Valve is "UPWARD".

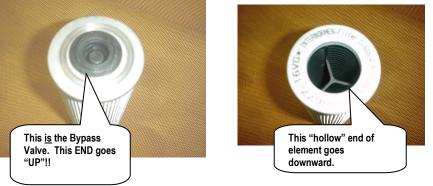



APRIL '19


6- Now re-install the filter housings COVER. Snug up with LIGHT-MEDIUM force.


Now check you oil tank "fill Level" ... and top off as need be (See P-M manual for detailed instructions).

LOADHASTER 800-433-2768 ELITE SEC 07-- PG 01 [APRIL '19]

BODY FACE & ROOF's PLUMBINGS ((TUBES & HOSES, etc)
--------------------------------	----------------------

NO	Q	DESCRIPTION		PART NO
1	1	Valve-to-Roof Pressure Tube (1" OD)	6YD 8YD 10YD 11YD	9930225 9930215 9930228 9930295
2	1	Tank Return Roof Tube (1" OD)	6YD 8YD 10YD 11YD	9930227 9930217 9930230 9930294
3	2	Tailgate Tube (5/8" OD)	6YD 8YD 10YD	9930226 9930216 9930229
		11YD INNER <1 11YD OUTER<1		9930296 9930297
4	4			9960049
5		1" HydraZorb Clamp Kit		9960050
6	2	Hose Assy- 1/2" x 64" Lg. (Tailgate Lift)		9934145
7	1	Hose Assy- ¾ x 53" Lg ((Pressure)		9934144
8	1	Hose Assy- 1" x 53: Lg. (Return)		9934146
9	Q	X		
10	Q	X		

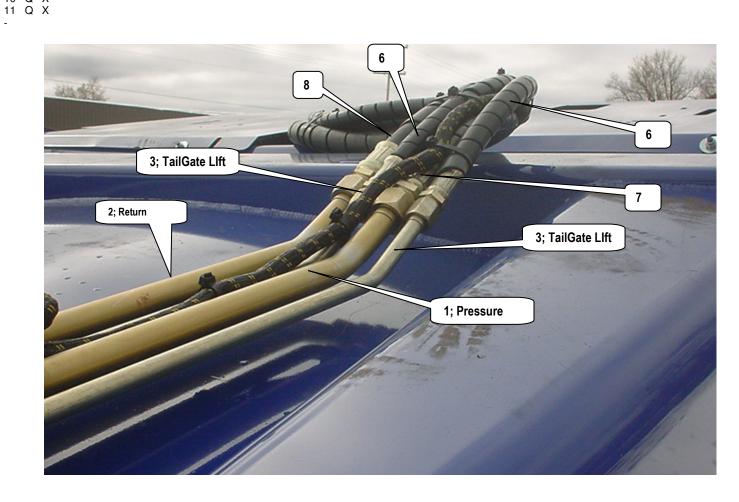

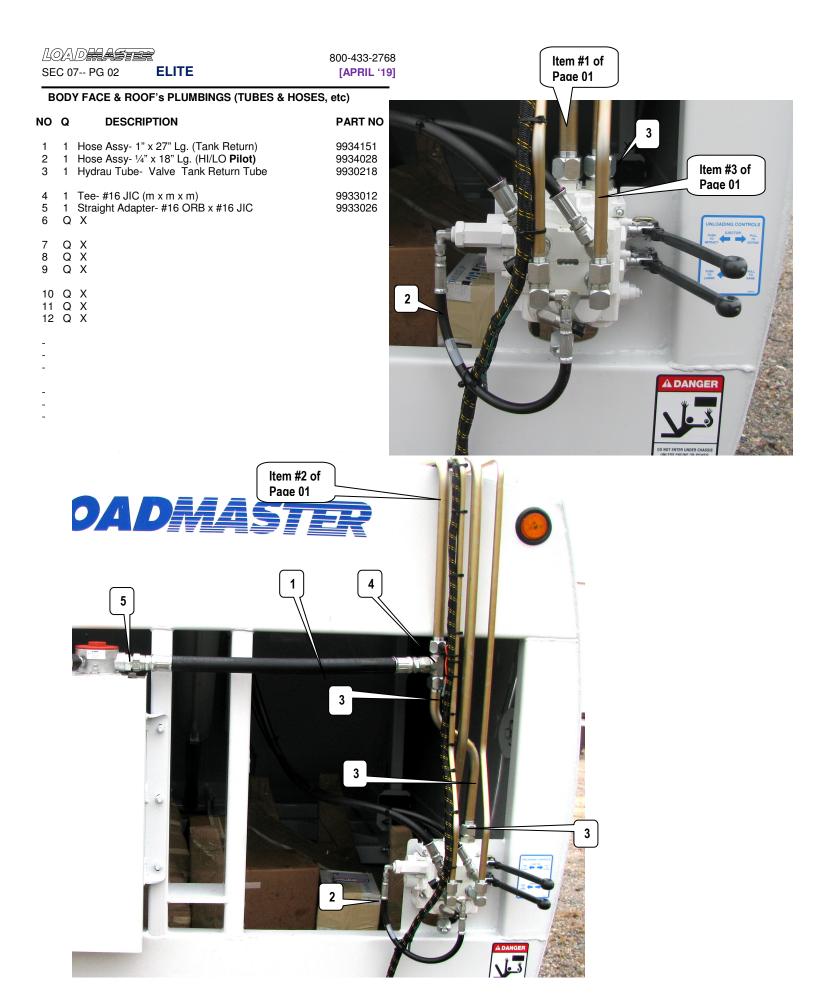


LOADHASTER

13 14 -

SEC 07-- PG 03 ELITE

800-433-2768 [APRIL'19]

В	BODY-MOUNTED VALVE's (aka "BMV") PLUMBINGS					
NO	Q	DESCRIPTION	PART NO			
1	1	ELITE "Body-Mounted Valve" (BMV)entire Parker V20; AutoLoks is BPS for the ELITE	9932063			
2	1	90 Degr Adapter- Long ("tapped-out") #10 orb x #10 jic long 90	2600082			
3	1	90 Degr Adpapter- Long #10 ORB x #10 JIC	9933284			
4 5 6		90 Degr Adapter- #10 ORB x #8 JIC (retract) 90 Degr Adapter- #10 ORB x #10 JIC (extend) 90 Degr Adapter 1/4" NPT x #4 JIC	9933103 9933036 9933069			
7 8 9		90 Degr Adapter -#4 ORB x #4 JIC Straight Adapter #12 ORB x #16 JIC 45 Degr Adapter #12ORB x #12 JIC	9933032 9933285 9933086			
10 11	1 1	Hose Assy – 3/8 x 49" lg. (retract) Hose Assy- ½" x 45" lg. (extend 8 YD, 10 YD, 11 YD) Hose Assy- ½" x 50" lg (extend 6 YD)	9933149 9933150 9933160			
12	Q	Х				

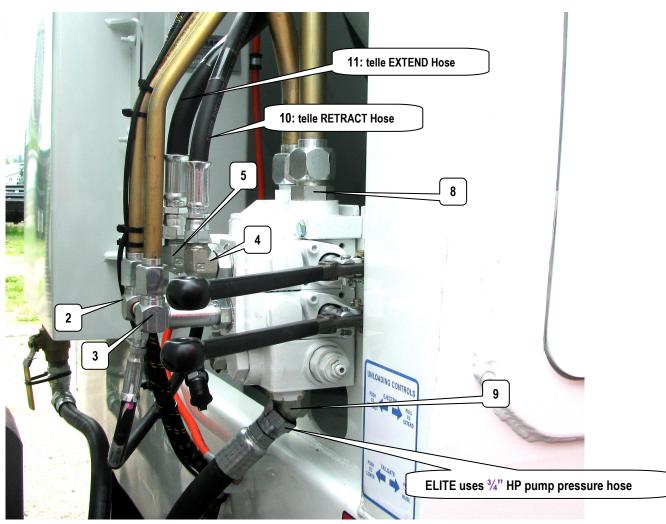


LOADHASTER

SEC 07-- PG 04 ELITE


800-433-2768 [APRIL '19]

BODY-MOUNTED VALVE'S PLUMBINGS

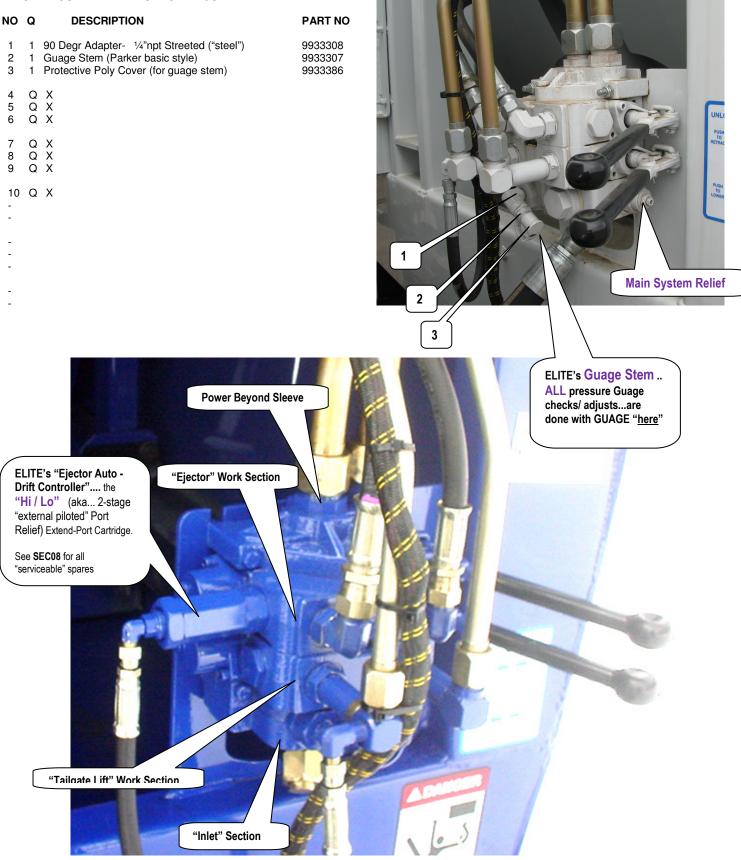

800-433-2768 [APRIL '19]

SLIDE & SWEEP CYLINDERS & PLUMBINGS

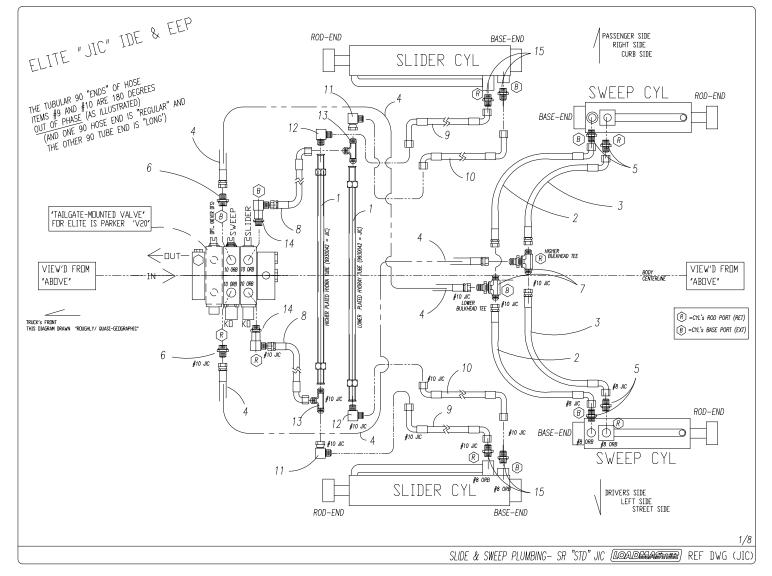


ELITE'S SLIDE & SWEEP "JIC" PLUMBINGS

ITEM	REQ	DESCRIPTION	PART NO.
1	2	HYRAU TUBE ASSY– JIC (SEE PRINT)	9930042
2	2	HOSE ASSY– SWEEP 1/2" X 29"	9934152
3	2	HOSE ASSY– SWEEP 1/2" X 31"	9934153
4	2	HOSE ASSY– SWEEP 1/2" X 36"	9934154
5	4	STRAIGHT ADAPTER– #8 ORB X [#8] JIC	9933021
6	2	STRAIGHT ADAPTER- #10 ORB X #10 JIC	9933022
7	2	BULKHEAD TEE– #10 JIČ	9933373
8	2	HOSE ASSY-SLIDER 1/2" X 29"	9934175
9	2	HOSE ASSY– SLIDER 1/2" X 30"	9934176
10	2	HOSE ASSY- SLIDER 1/2" X 32"	9934177
11	2	90 DEGR ADAPTER– #10 JIC MALE X #10 JIC FEM SWIV	9933075
12	2	90 DEGR ADAPTER– #10 JIC [°] M X #10 JIC M	9933063
13	2	TEE– #10 JIC MALE (R̈́UNS & BRAN̈́CH)	9933012
14	2	90 DEGR "LONG" ADAPTER- #10 ORB X #10 JIC	9933284
15	4	STRAIGHT ADAPTER– #8 ORB X #10 JIC	9933366

800-433-2768 [APRIL '19]

SLIDE & SWEEP CYLINDERS & PLUMBINGS

See pg 05 for "ballooned" items descriptions/ part numbers

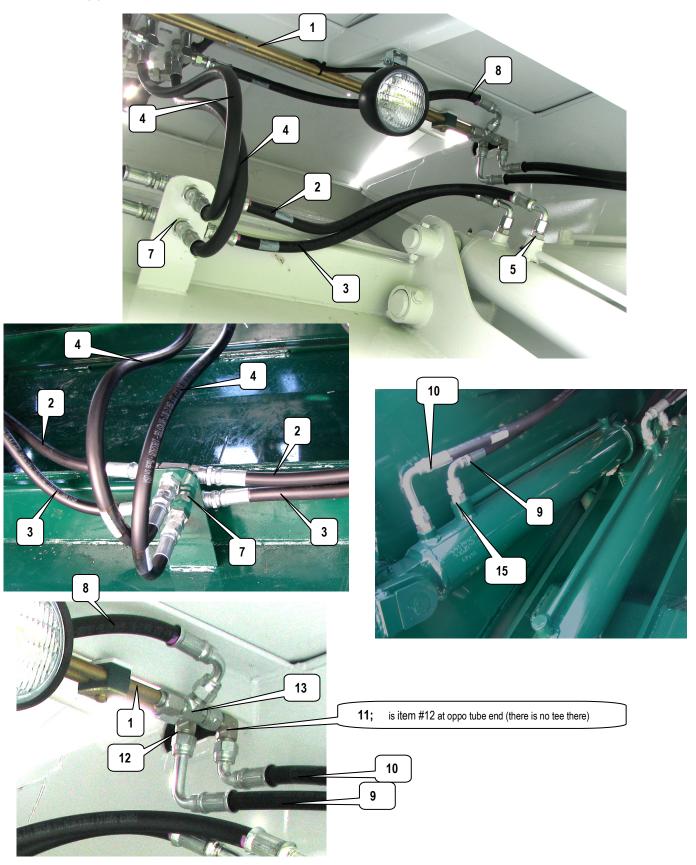

LOADHAST		800-433-2768
SEC 08 PG 01	ELITE	[APRIL '19]

MAIN SYSTEM RELIEF (of ELITE'S Body-Mounted Valve)

NO	Q	DESCRIPTION	PART NO
1		System Relief (v20 style for legacy3) ncludes the seal kit shown)	8800526
2	- " Seals	s only" KIT for Main System Relief	8800806

3 - -

The seals must be installed in the correct sequence...as shown.

Tip...the seals are not "captured" in a groove...they are installed on the "shoulder"...apply liberal dose of common grease to shoulder and tip seals to HOLD them in place as you gently insert them into the valve's "cavity".

Tip...with any cartridge installed in a valve cavity...be certain *the cavity* Is <u>clean</u> and free of debris...use a penlight to see inside cavity and then fish-out any old debris.

This relief is **NOT** shipped Pre-set to correct Legacy setting! <u>It must be "adjusted".</u> See your Legacy Maintenance manual for "adjusting/ setting" to correct Legacy specification.





POWER BEYOND SLEEVE (of ELITE's Body-Mounted Valve)


NO	Q	DESCRIPTION	PART NO
1	1	Power Beyond Sleeve (includes the seal kit)	8800335
2	-	Seal kit only for above PB sleeve	8800807

The seals must be installed in the correct sequence...as shown.

Tip...the seals are not "captured" in a groove...they are installed on the "shoulder"...apply liberal dose of common grease to shoulder and tip seals to HOLD them in place as you gently insert them into the valve's "cavity".

Tip...with any cartridge installed in a valve cavity...be certain the cavity Is clean and free of debris...use a penlight to see inside cavity and then fish-out any old debris. (Installing *new* seals in a "fouled" cavity will result in failure of the new seal-system.)

Installing the PB sleeve's seals <u>correctly</u> can be difficult because a pool of oil will fill the *upward* directed "cavity"...you may choose to mop out the oil using paper-towels...or suck oil out with hypodermic style tool. Then install the PB sleeve...with it's *greased-up* seals into "dry" cavity.

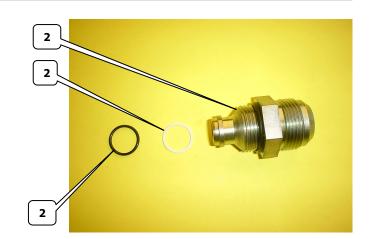



LOADHAS	800-433-2768	
SEC 08 PG 02	ELITE	[APRIL '19]
HI/ LO ELITE Eie	ctor "drift" controller (2-stage V20 Port Belief)

HI/ LO ELITE Ejector "drift" controller (2-stage V20 Port Relief) (at Ejector Work-Section of BMV...Extend Port Mounted)

NO	Q	DESCRIPTION	PART NO
1	1 -		
2			
3			



TAILGATE MOUNTED VALVE...UNIVERSAL KNOCK-OUT SECTION

NO Q DESCRIPTION PART NO

1 - Universal Knockout (K.O.) Work Section (V20) 8800671

This particular *universal* V20 K.O. work section is "adaptable" to various products and locations. The **ELITE** uses two K.O. Work sections...the **Slider** blade's work section (the section closest to "ground") and the **Sweep** blade's work section (right next to slider, just above slider's).

When replacing the **Slider's** work section...you just need to order item1 and at least one "section seal kit-**V20**". The Slider work section has <u>no</u> port mounted devices and its cavities simply remained "plugged".


When replacing the *Sweep's* work section...order this universal KO Work section **and** also order...

The "section seal kit- v20" (at least one)

The sweep's structure protecting Port Relief (see below) The Anitcavitation Check (see below)

DO NOT OPERATE YOUR ELITE WITHOUT THE <u>IMPORTANT</u> "STRUCTURE" PROTECTING "PORT RELIEF" AND "ANTICAV" INSTALLED INTO THE <u>SWEEP</u> BLADE'S WORK-SECTION!

Any K.O. work sections ordered are **NOT preset** to their correct **ELITE** Specifications...see your Hydraulics Manual to <u>Adjust</u> the K.O. positioner to correct ELITE specs...after you have installed it into your truck.

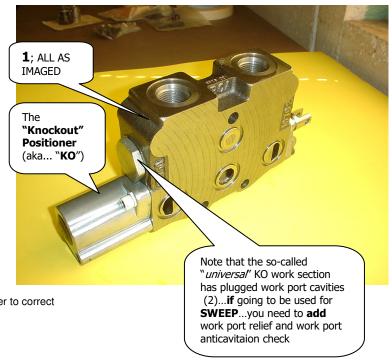

TAILGATE MTD VALVE...SWEEP WORK SECTION'S PORT DEVICES...the Port Relief and the Anticav (together) protects the structure.

NO Q DESCRIPTION

- 1 Universal V20 Work Section w/ K.O. positioner See above information
- 2 1 **Port Relief** (set to 3700 PSI "crack") Includes all the seals and the "load check"

Note position...be sure to install **Relief** at the work port at the **Spool Clevis side** for the **ELITE** (which is the Passen-side)


3 1 Anti-Cavitation Check(aka..AnitCav) Includes all the seals and the "load check"

Note position .. be sure to install the **AntiCav** at the **KO detent** side (driver's) for the **ELITE**

Tip...notice that the **V20** port devices come in loose "pieces". Before trying to install...sub assemble all the "pieces" in the sequence shown. Then use stiff (cold) common grease to HOLD the assembly together...then carefully align and insert into the clean casting cavity. If it did NOT "fall apart"... the threads will thread without "resistance". If you DO feel un-natural "resistance" when threads engage... it *probably* "fell apart", so remove everything from the "cavity" and "start over again".

That "mushroom" shaped poppet with the flimsy spring behind it constitutes the **V20** style "load check".

Tip...whenever you "remove" a **V20** port device... The load check will want to lay in the cavity...you must "fish it out" yourself...it won't come out "on Its own". BEST ADVICE=always inspect the cavity to be *clean*...with a penlight and your eyes... whenever working on *any* **V20** port device. Use a magnet-wand and/or hooking tools to "fish".

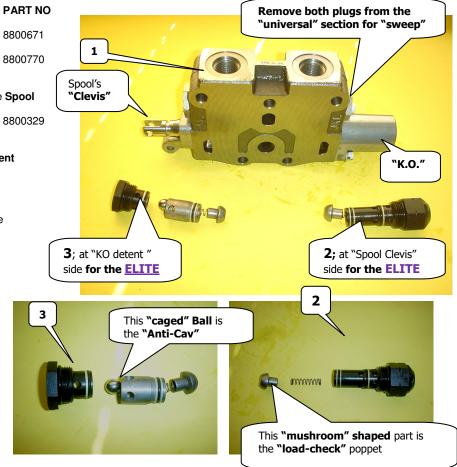

PART NO

V20 "SECTION SEALS"


NO Q DESCRIPTION

1 - Section Seal Kit (**V20** style) 8800763 One seal kit is enough for *one* section. There will be 3 large diameter o-rings, and one smaller Diameter o-ring needed...in the seal "kit".

<Note...You may receive in each section seal kit some un-needed seals... Just use what is shown here and dispose of the unused stuff..>

Tip...be sure to **Evenly** Torque-up your V20 tie-rods to **32** FT-Lbs. when reassembling...uneven or excessive torquing can cause erratic valve operation.

Too-low of tie-bolts torque can cause newly installed section seals to quickly fail and "leak". Too-high torquing will cause casting "distortion".

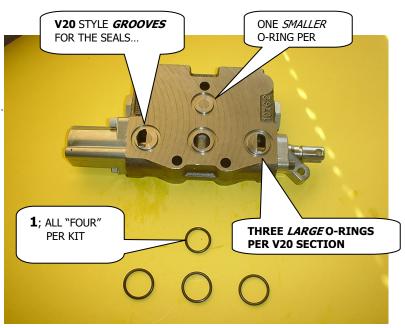

V20 SPOOL SEAL (AT THE SPOOL CLEVIS SIDE)

NO Q DESCRIPTION


PART NO


1 - **Spool** Seal Kit (*Tailgate*-Mtd Valve's spools) 8800306 This kit contains...two o-rings and two washers (This is enough to do both "ends" of one spool)

Note that Kit does *not* include the re-useable metallic parts. Note assembly sequence shown in image.

Spool Seal Kit for <u>Body</u>-Mounted Valve's spools 8800808
 Notice that this kit has "EXTRA" wiper
 For the two *Body-MTd* spools, one spool's worth per p/n ordered

3 - Handle Bracket (includes the two screws) 9931015

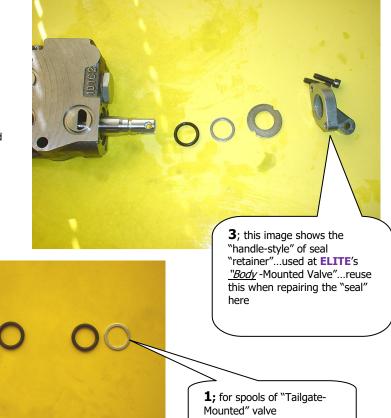

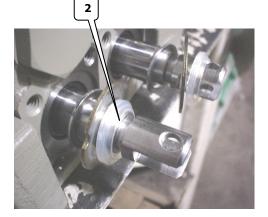


TAILGATE-MOUNTED VALVE...KNOCKOUT'S BONNET

NO Q DESCRIPTION PART NO

- 1 Bonnet (V20) 8800336 does not include plastic adjust hole plug or The socket screws
- Hole Plug V20-style (for K.O.'s adjuster access) 8800092 Black plastic piece...it is important to keep the K.O. "sealed" with this Hole Plug ...If adjuster hole is left wrongly "open"...water (pressure washes ,etc) will enter the K.O. and cause *rusting* of the K.O.'s many intricate steel parts. Also, dust will enter K.O. (when plastic garbage bags rupture during compact...dust often will puff out) and *this* will cause premature K.O. wear down.

Tip...it is a good idea to coat the bonnet end and plug with common liquid vinyl (buy a small can with "dobber") for extra protection...particularly for frequent "pressure washes" in the valve area.

3 - Socket screw fastener "kit" 8800810 Includes 2 screws and 2 special shape washers

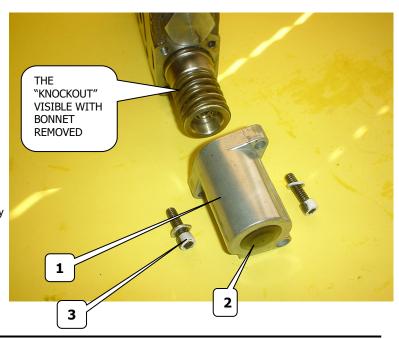

TAILGATE-MOUNTED VALVE...SPOOL & KNOCKOUT SUBASSY

NO Q DESCRIPTION

PART NO

1 - Spool & Knockout Assembly-V20 style 8800739 <NOT preset...must be *adjusted after installed*>

The spool and K.O. is best removed from the work section casting "as an assembly". Remove the two bonnet's socket-head screws. Disconnect the mechanical push-pull rod from spool's clevis.

First **push** on clevis-side of spool to begin drifting out the assembly. Then pull on the *spool itself* (<u>not</u> the K.O. mechanism) to complete assembly removal. Be careful to NOT allow the K.O.'s collar to move *relative* to the spool (the various K.O. inner parts would DIS-assemble themselves... a "mess").


Note. You do NOT need to disassemble the clevis-side spool seal (unless you wish to install fresh seal 8800306 here).

This PART allows replacement of spool & knockout <u>without</u> the more time consuming process of replacing the *entire* cast section. (Although, there can be cases when the *whole* cast work section will *need* to be replaced.)

 Spool Seal...included in V20 "spool seal kit" p/n.... 8800306 This o-ring seats into machined shoulder recess in section casting. (A second, *same* o-ring seals the spool on the other "clevis" side.)

3 - Bellow Boot (**V20** style...spool seal protection) 8800809 Includes the light gauge steel "capture"



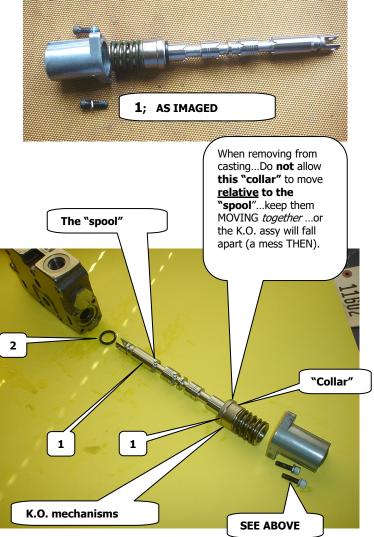


TAILGATE-MOUNTED VALVE (PARKER V20)...AVAILABLE "Knock-Out" LOOSE PARTS (& TIE-ROD KITS)

NO Q DESCRIPTION

PART NO

1	-	Knock-out Seal Kit (<i>Parker</i> has made N/A) Various seals per KnockOut postioner (V20)	8800331
2	-	Tool (special tool to <i>adjust V20 Knockouts</i> adjuster)	8800316
3	-	V20 knockout centering (Extra Heavy for K-O's)	8800777
4	-	V20 Knockout thread Adjusters stem	8800518
5	-	V20 Slotted Jamming Collar	8800519
6	-	V20 K.O. Hole plug (Adjuster access hole in bonnet IMPTkeep you K.O.'s sealed from grit & water!!	8800092
7	-	V20 K.O. Detent Balls (Sold individually)	8800521
8	-	V20 Tie Rod Kits Includes the 3 PER V20 tie rods and enough "sect for the whole valve assy	tion seals"

kit for:	2 spooled work sections	8800310
	3 spooled work sections	8800311
	4 spooled work sections	8800312
	5 spooled work sections	8800313
	6 spooled work sections	8800314

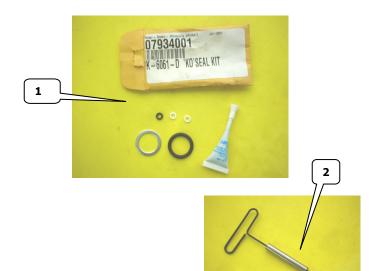



CROSS SECTION OF 3 "V20" Knock-Out Postioner p 0 D Ó 'KO' Spool 'KO' Pressure 4 Sensing Hole Work Section Housing Torque to: 32 in. lbs. Apply Purple Thread Locking Compound (Ref. Loctite 222) Ref No.s 6 & 19 and (3,6 Nm Torque to: 10 - 12 Ft Lbs (13 - 16 Nm) Torque to 5 Ft Lbs (7 Nm) 6 5 8 C 000 000 7 0 000 O 0 0 C

LOADHASTER SEC 09- PG 01 ELITE

800-433-2768 {**APRIL** '**19**}

	2-1 0	0" Q	REEVER OPTION DESCRIPTION	PART NO
1		1	Rearward Sheave box Weld assy (Weldment "only" that welds to "channel")	0120635
2		1	3" Diameter Sheave	9960243
3		1	Pin	0080227
4		1	5" Diameter Sheave	9960074
5		1	Axle	0080226
6		1	Pin (for cylinder base-end)	0080228
7		1	Cable (1/2" x 52 footwith "hook")	9960140
8		1 (T	Hydraulic Cylinder (Petibone style) his "style" has welded on barrel "guide eye	9937067 s")
9		1	Main backbone Channel If Excel, then part no is If Legacy, then part no is	0031383 0030558
1	0	3	Wire Rope Clamp (aka"clip") (See Maint Manual for correct/secure in	9960041 stallation)
1	1	1	Thimble (for 1/2" wire rope)	9960041
1:	2	1	Pin weld assy (for laying flat sheave)	0120390
1:	3	-	Rearward Sheave Box Sub assy (The weldment <i>with</i> its sheaves, pinning	0120362 j's, fasteners)
1	4	2	Hose Assy If Excel, ½" x 131" lg If Legacy3, ½" x 106" lg	9934174 9934192
1	5	1	Sheave- 6" diameter	9960066
1	6	-	Seal Kit for Hydraulic Cylinder 9937067	8800719
N	0	Q	DESCRIPTION	PART NO
1		1	Sliding Sheave Block Weld assy	0120015
2		2	Sheave- 8" diameter	9960062
3		1	Main Pin (for "sliding" sheave block)	0080051
4		1	"T-bar" (This welds to "backbone" channel)	0070054
5	:	2	Polymer Wear Block	2600020

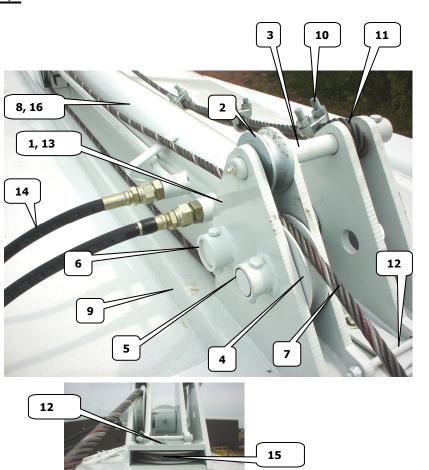


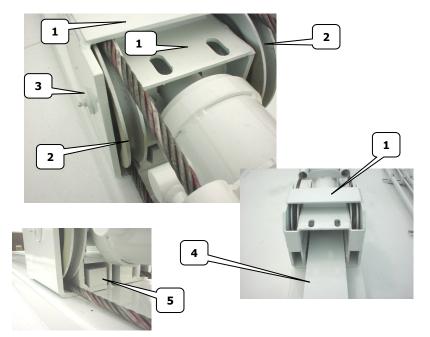

800-433-2768 {APRIL '19}

"2-10" REEVER OPTION (ELITE STYLE)



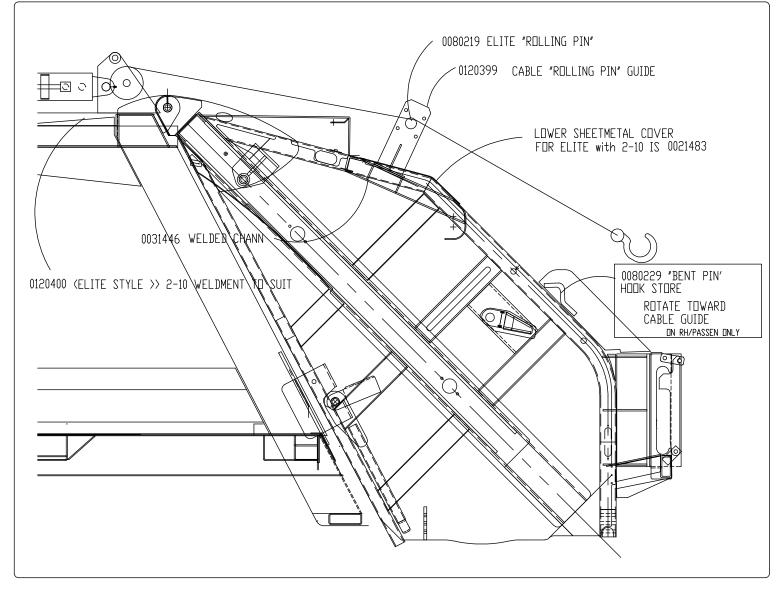


 LOAD
 SEC 09-- PG 03
 ELITE
 800-433-2768


 SEC 09-- PG 03
 ELITE
 {APRIL '19}

CLEAR-STEP ROLLBAR ... OPTION

NO	Q	DESCRIPTION	PART NO
1 2	1 1		0120383 0120384
3	1	Kick Arm Weld Assy- Driver's side (standard length) Kick Arm Weld Assy- Driver's (+1" longer/ 1 dimple) Kick Arm Weld Assy- Driver's (+2" longer/ 2 dimple)	0120625 0120803 0120808
4	1	Kick arm weld assy- Passen side (standard length) Kick Arm Weld Assy- Passen (+1" longer/1 dimple) Kick Arm Weld Assy-Passen (+2" longer/ 2 dimple)	0120626 0120804 0120809
5	1	Cross Tube Weld Assy (ELITE style) (This assy includes the retained poly rollers)	0120609
6 7	2 4	Poly roller (Only the polymer "roller") Poly roller's Retainer Collars (weld-on)	2600033 0050026
8 9 10	2 2 2		0120415 0080235 0080234
11	2	Cylinder (for clear step roll bar option) Seal kit for Roll bar Cylinder <i>(complete</i>)	9937070 8800613

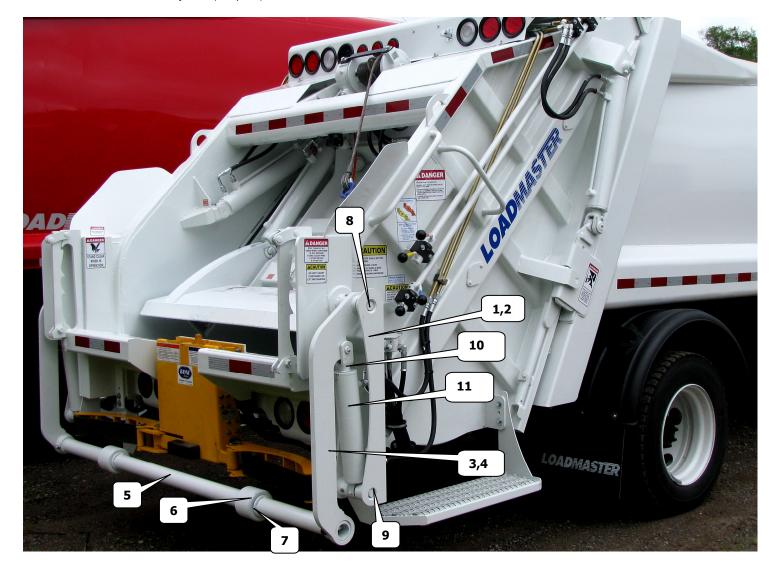


LOADHASTER SEC 09-- PG 04 ELIT

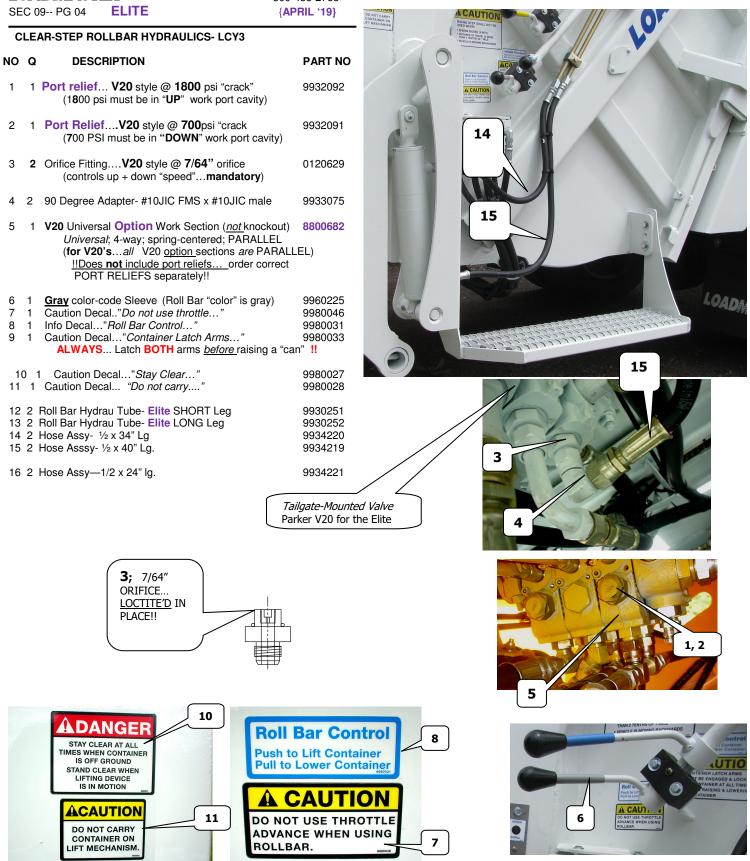


800-433-2768 [APRIL '19]

CAN LATCH OPTIONS (ELITE "STYLE")

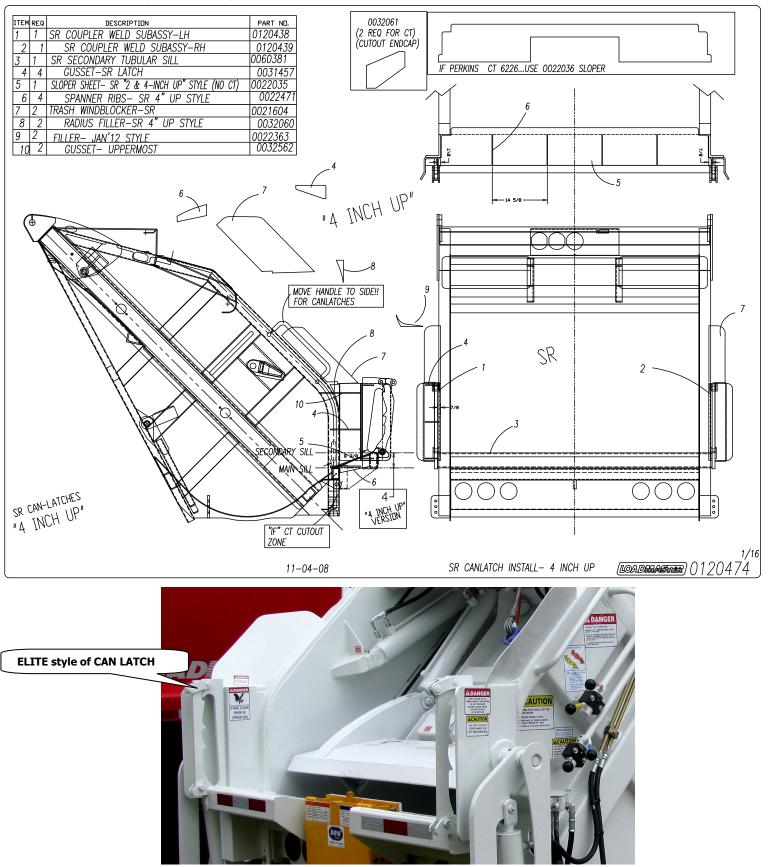

800-433-2768 [APRIL '19]


CAN LATCH OPTIONS (ELITE "STYLE")

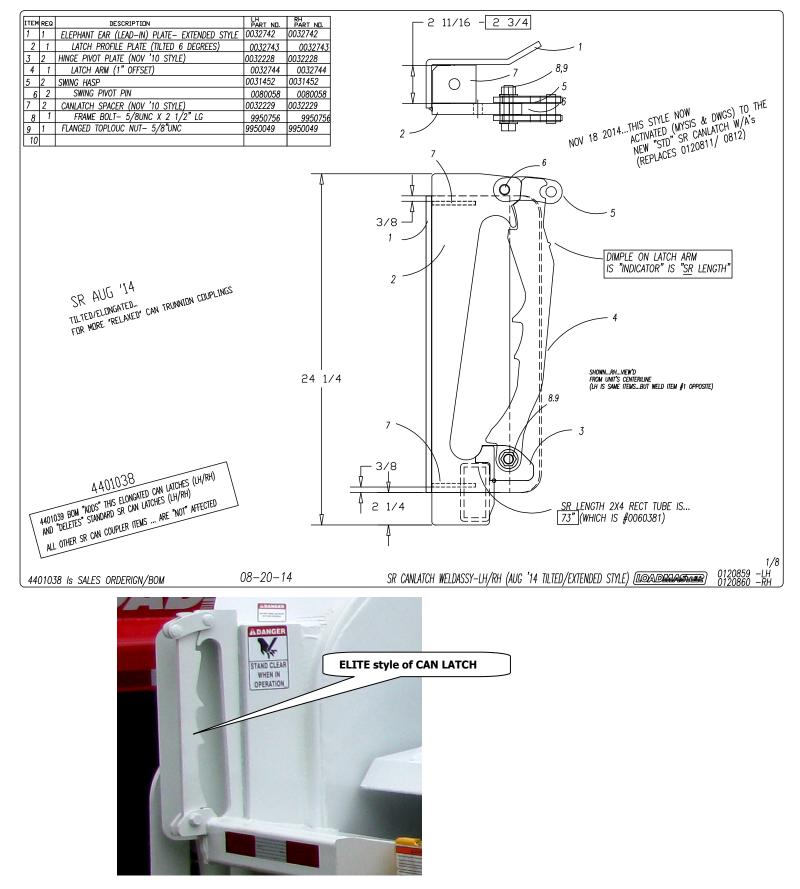


 LOAD
 Sec 09-- PG 07
 ELITE
 800-433-2768
 Revenue
 Revenue

DRUM WINCH OPTION... 8K ELITE

NO	Q	DESCRIPTION	PART NO
1 2	1 1	Spooling Drum Winch (Bloom 8k complete) Cable Capture	9960001 0032047
3 4	1 2	Cable Assy (w/ Swaged on hook) Wind Blocker / Funnel Panel	9960156 0021604
5 6		Hose Assy- ½" X 32" Lg. (elite Winch) XX	9934066
7 8	_	x x	
9 10 11	6	Capscrew- 1/2unc x 4 ½" lg (grade 8) Flanged Lock nut (G8) ½ unc 9/16" Thru Hard Flat Washers Items 9> 11not visible, but anchors the Winch	9950716 9950062 9950139

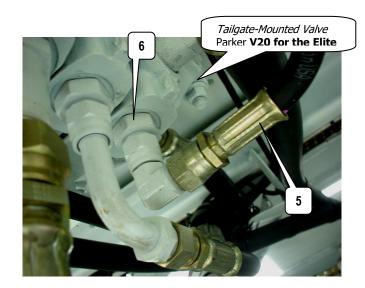

Drum Winch Opt.... does NOT get any flow restriction devices (none used).

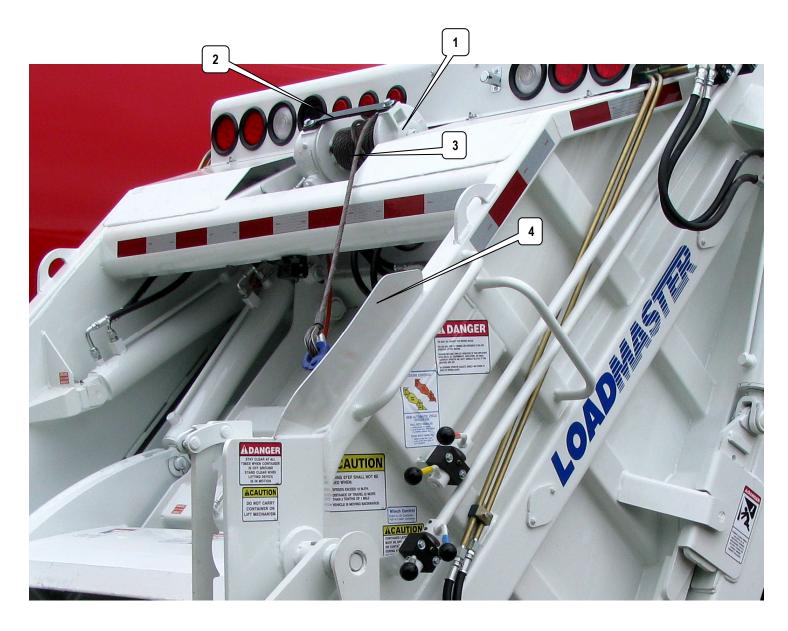

LOADHASTE	2	800-433-2768
SEC 09 PG 08	ELITE	[APRIL '19]


SPOOLING DRUM WINCH... 8K on ELITE


NO Q DESCRIPTION


1 2


1 V20 Port Relief (1800 PSI "crack")winch UP port	9932092
1 Blue Color Vinyl Sleeve (winch opt color is "blue")	9960224

PART NO

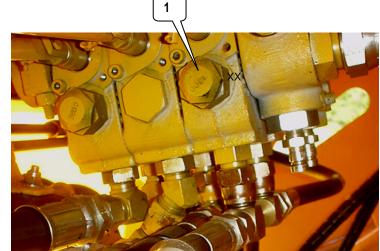

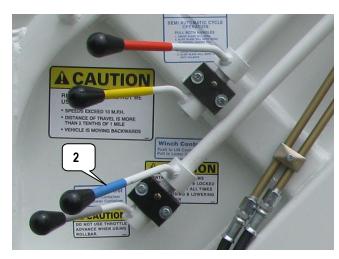


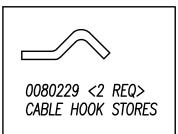

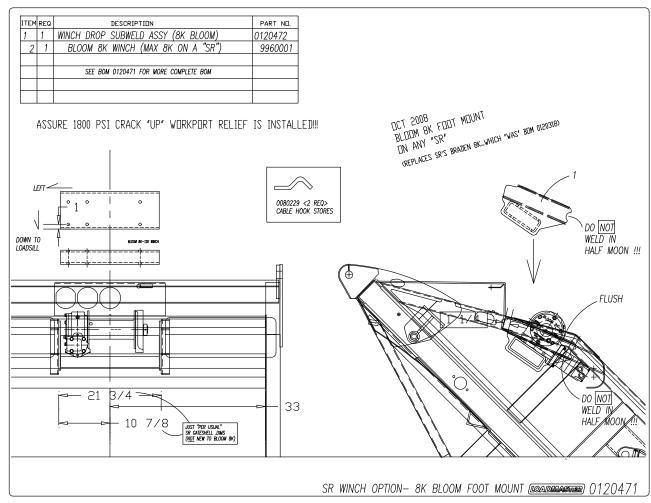

800-433-2768 [APRIL '19]

REMOTE GREASER OPTIONS (Elite styles)

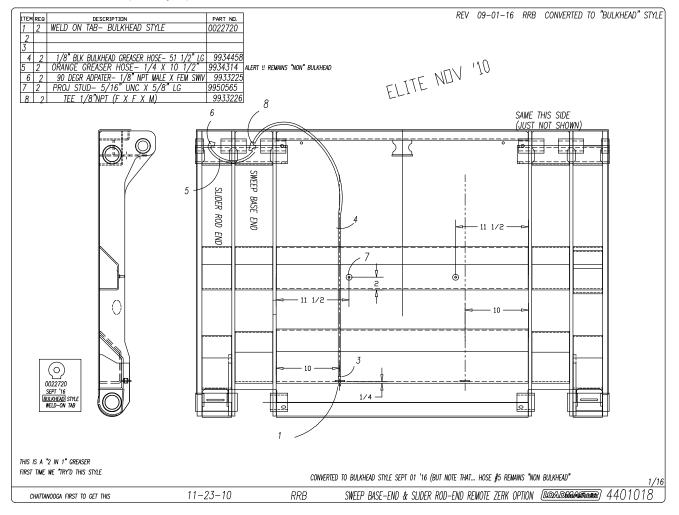




Loadhaster


SEC 09-- PG 10 ELITE

800-433-2768 [APRIL '19]


REMOTE GREASER OPTIONS (Elite styles)

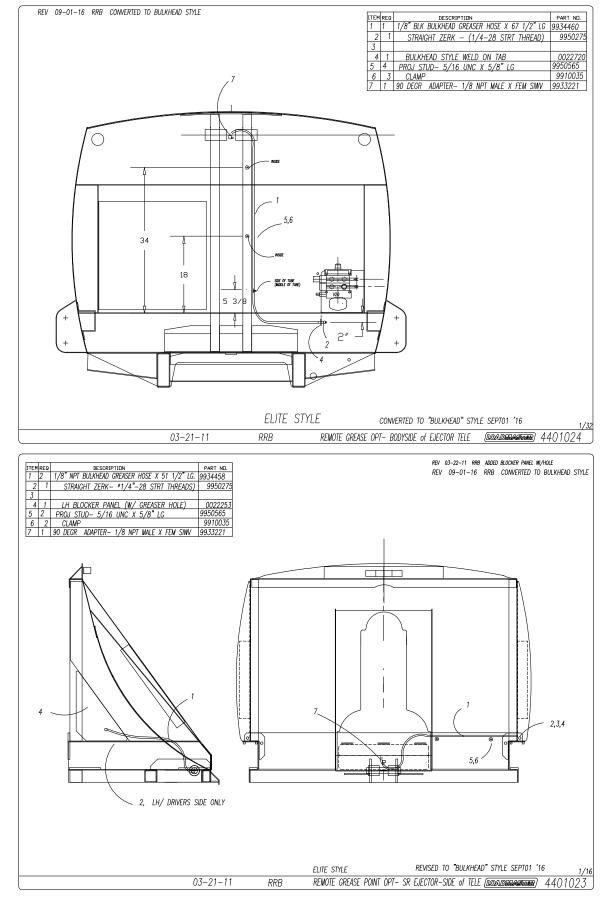

OVER ALL ELECTRICAL SCHEMATIC (GENERIC)... LEFT HALVE

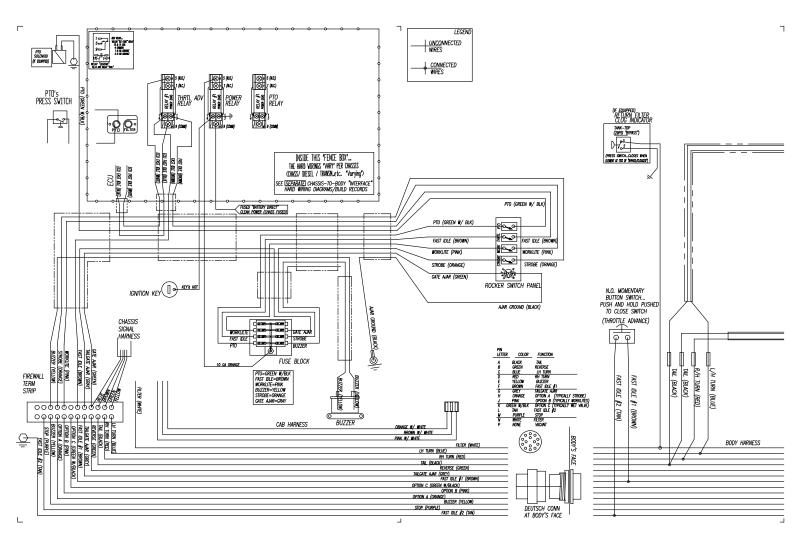

OVER ALL ELECTRICAL SCHEMATIC (GENERIC)... RIGHT HALVE

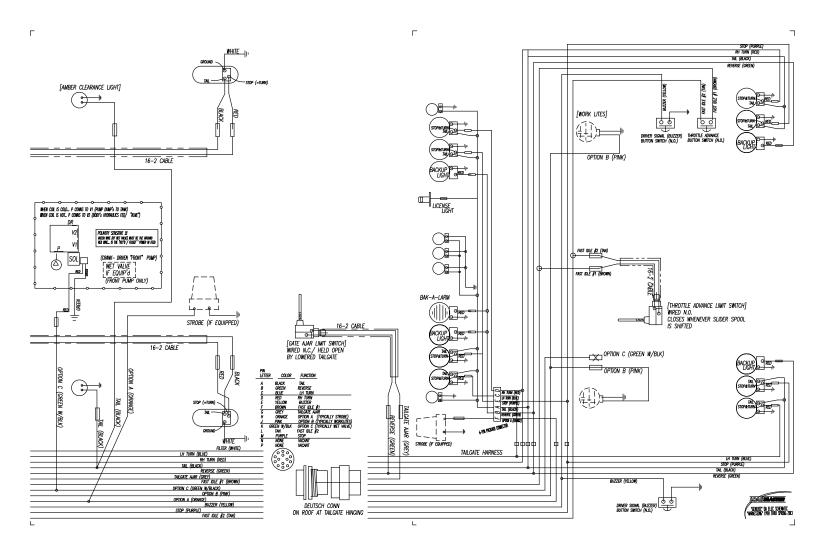

800-433-2768 [APRIL '19]

CORRECT "FACTORY" ELITE PRESSURE SETTINGS

Main System Relief >>2775- 2750 PSI @ T-ADV at warm'd oil

Slider KO Positioner >> 2375- 2350 PSI @ T-ADV at warm'd oil

Sweep KO Postioner>> 2350- 2250 PSI @ T-ADV at warm'd oil

Hi/Lo set Lo of Hi/Lo to >>1400 PSI @ <u>T-ADV!</u>

Structure Protection Port Relief >> 3700 PSI "crack" (fixed; not adjustable) ... Installed at Sweep Cylinder's BASE END work port

If **WINCH** opt> **1800** PSI 'crack" port relief must be at the **UP** workport (*no* relief for winch *down*) & **no** flow restrictors

If "2-10" Roof-Mounted CABLE REEVER opt> 1800 PSI <u>UP (only)</u> port relief & no flow restrictors For ELITE only...the UP port relief DE-Tunes the "2-10" to 8K line pull

If **ROLL BAR** opt> **1800** PSI "crack" **UP** port relief and **700** PSI "crack" **DOWN** port relief Work port **ORIFICES** (flow restricting) are present at "**both**" Roll Bar **workports**

If ExtraValveSection style of Cart Tipper(s) opt>

1800 PSI "crack UP and **700** PSI crack down port reliefs must be present AND **2** "adjustable" In-Line flow restrictors: adjusted to yield CT = **8.5** (-8.8) seconds **UP** + **DOWN** (no pause between)

PART NO

SOME "TOOLS" FOR THE ELITE

NO Q DESCRIPTION

 1
 - Assembly,,,.0-5000 Glycerin Gauge on a 2-foot Hose with Female coupler
 0130014


- 2 Coupler (a "Quick Connect") ONLY 8800525 That mates to the "standard" LoadMaster male gauge stem Other "end" of it is ¼"npt female
- 3 Glycerin Filled Gauge (0-4000 PSI) 9931110 1/4"npt male stem style This is the "cheap" 2 1/2" diameter "common" gauge See Below for some "good advice"
- 4 Gauge Hose assy- ¼" x 24" OAL (5000PSI W.P.) 9934092 ¼"NPT male x ¼"NPT FMS
- 5 **V20** "Knock-Out" Adjusting Tool 8800316 The Parker **V20** is the ELITE's Tailgate-Mounted Valve The **V20** (only) <u>needs this tool</u> to adjust it's Knock Out Positioner
- 6 **4" DIAMETER** Glycerin-Filled 0-**5**000 PSI gauge 9931111 You could successfully adjust your pressures using a Cheap 2 ½" common gauges (\$30)...but they *can be* NOT worthy of Trust...at least use a "newer" cheap gauge.

This 4" diameter glycerin gauge is much more "trustworthy". This p/n is "panel mount" style....but is also available without the panel "flange". **4"** glycerin gauge (about 180\$) is recom'd for a DEALER. It is durable. In fact, "NOSHOK" gives a 3-year warranty (demonstrating their confidence in it's durability/ reliability...just don't "smash it around"). It is much easier to read "accurately". It is 0-5000 full range. So you are much less likely to SPIKE it and damage the "bourdon tube" inside (I/m's products tend to be around 3000 + psi "settings").



Every LOADMASTER Body will have a **Male Gauge Stem** at the Inlet Cover of "Body-Mtd Valve"...this is PUMP PRESSRE...**ALL** LOADMASTER "pressure checks" are done **at** <u>this</u> Gauge Point.


DANGER: NEVER ENTER THE BODY WITHOUT FIRST DOING A "SHUTDOWN" & LOCKOUT/TAGOUT PROCEDURE. Read your Operator/s / Maintenance manuals

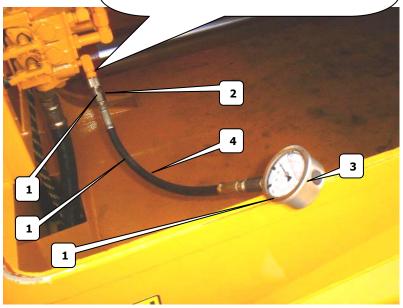

5

5


OverAll HYDRAULIC SCHEMATIC (TYPICAL PTO)...ELITE (LEFT HALVE)

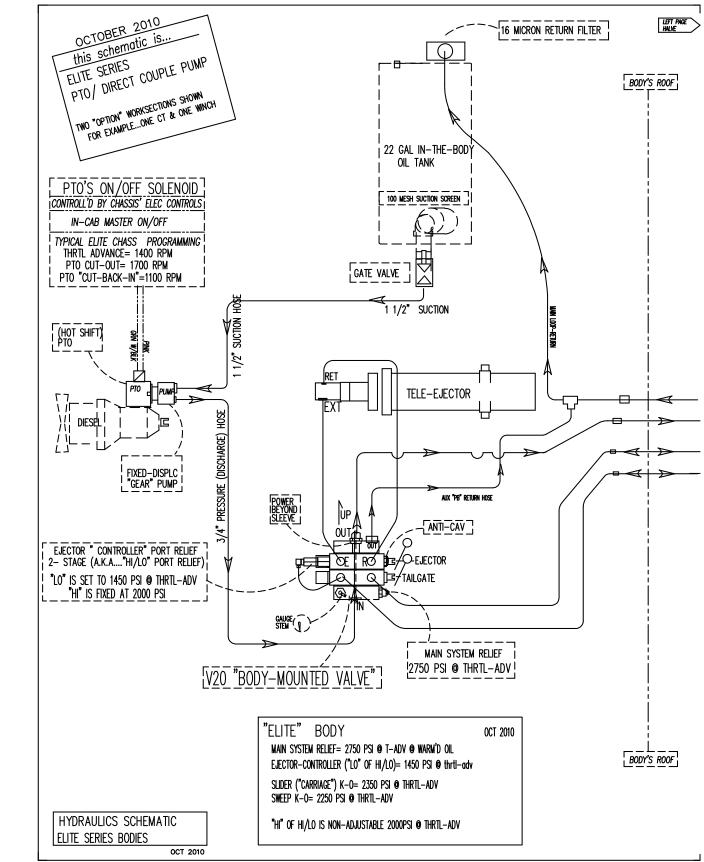

LOADHASTER SEC 10-- PG 06 ELITE

800-433-2768 [APRIL '19]

OverAll HYDRAULIC SCHEMATIC (TYPICAL PTO)...ELITE (RIGHT HALVE)

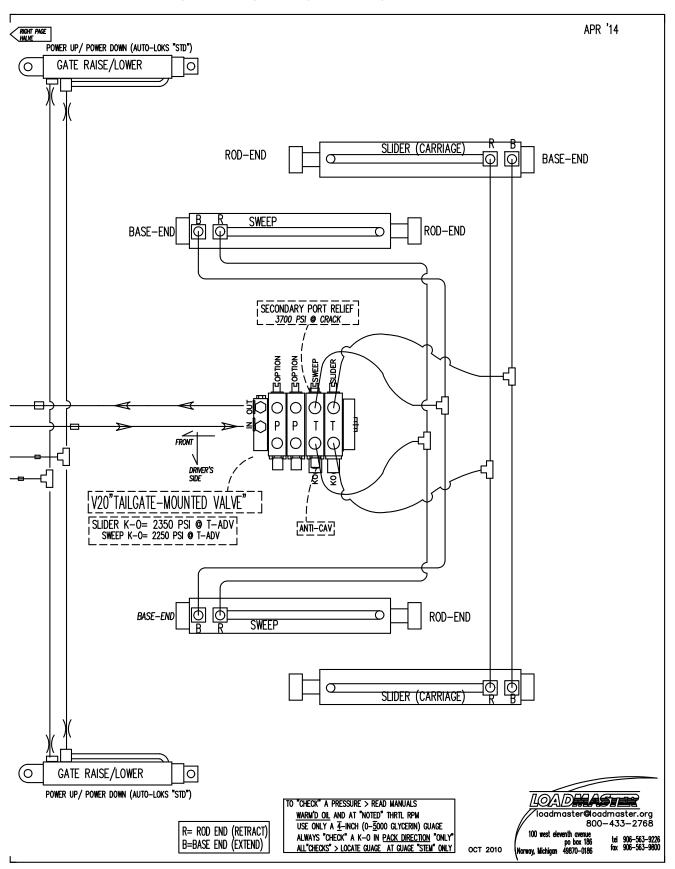


LOADHASTER		800-433-2768
SEC 12 PG 01	ELITE	[APRIL '19]

<u>CORRECT CABLE ANCHORING!!</u> Follow this "in detail"...the wire rope "industry's" methods! Image below shows "2-10 reever" option...but this applies to all cable anchoring.

As always...follow **all** of the *safe operating practices* for dumping containers as outlined in the "Operation and Maintenance Manual". The highlights of which are:

- **Never** walk beneath any raised container (or allow "others" to walk beneath).
- Always securely latch **BOTH** *trunnion-bar capturing* latch arms (the left *and* the right; **BOTH**!!!) <u>before</u> raising any container.
- □ Use *only* containers that are *compatible* with the Loadmaster container-coupler (aka...trunnion latches). This means dumping only containers that comply with WASTEC dimensional recommendations (the "rear-loader container" manufacturing industry's *dimensions*).
- □ Weekly "inspection" (and repair if needed) of cable, hook, the hook's spring-loaded capture, thimble and cable anchoring . And....Weekly inspection of the "2-10 reever" *mechanisms and hydraulics*...in general.
- Never use any Container Handling option (such as "2-10"/ Roll bar/ winch/ "1-2" ETC) to "carry/ transport" a container

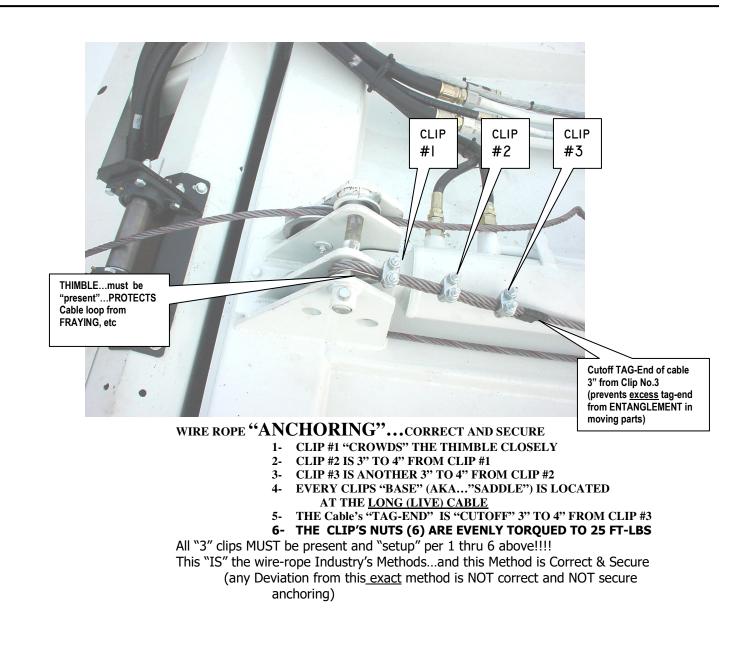

SEC12—PG02 PORT DEVICES CHART...ALL MODELS "CHARTED"...pick your *model* "column"

	EXCEL	LEGACY3	ELITE	MOD400
"2-10" ROOF REEVER OPT PORT RELIEFS ORIFICES	NONE NONE	NONE NONE	1800 CRACK NONE	NONE NONE
CLEARSTEP ROLLBAR OPT	-			
UP PORT RELIEF	1800CRACK V40=9932061 VG35=9932081	1800CRACK V20=9932092	1800CRACK V20=9932092	NONE NEEDED
DOWN PORT RELIEF	700CRACK V40=9932073 VG35=9932090	700CRACK V20=9932091	700CRACK V20=9932091	NONE NEEDED
UP/DOWN ORIFICES (2)	7/64 DIA V40=0120628 VG35=0120628	7/64 DIA V20=0120629	7/64 DIA V20=0120629	7/64 DIA V40=0120628 VG35=0120628
"1-2" SLING LIFT OPT				
UP PORT RELIEF	1800CRACK V40=9932061 VG35=9932081	1800CRACK V20=9932092	OPTION IS N/A ON ELITE MODEL	NONE NEEDED
DOWN PORT RELIEF	NONE	NONE	NONE	NONE
UP/DOWN ORIFICES (2)	7/64 DIA V40=0120628 VG35=0120628	7/64 DIA V20=0120629	OPTION IS N/A	7/64 DIA V40=0120628 VG35=0120628
WINCH OPT				
UP PORT RELIEF	1800CRACK V40=9932061 VG35=9932081	1800CRACK V20=9932092	1800CRACK V20=9932092	NONE NEEDED
DOWN PORT RELIEF	NONE	NONE	NONE	NONE
ORIFICES	NONE	NONE	NONE	NONE
PER CART TIPPER (1X OR	2X) INSTALL OR PI	ER " CT INSTALLED VAL	VE SECTION" OPTION	(S)
UP PORT RELIEF	1800CRACK V40=9932061 VG35=9932081	1800CRACK V20=9932092	1800CRACK V20=9932092	NONE NEEDED
DOWN PORT RELIEF	700CRACK V40=9932073 VG35=9932090	700CRACK V20=9932091	700CRACK V20=9932091	NONE
UP/DOWN ORIFICES (2)	IN-LINE ADJSTBL 9932076 (2 PER KD)	IN-LINE ADJU 9932076 (2 PER KD)	IN-LINE ADJU 9932076 (2 PER KD)	IN-LINE ADJU. 9932076 (2 PER)